


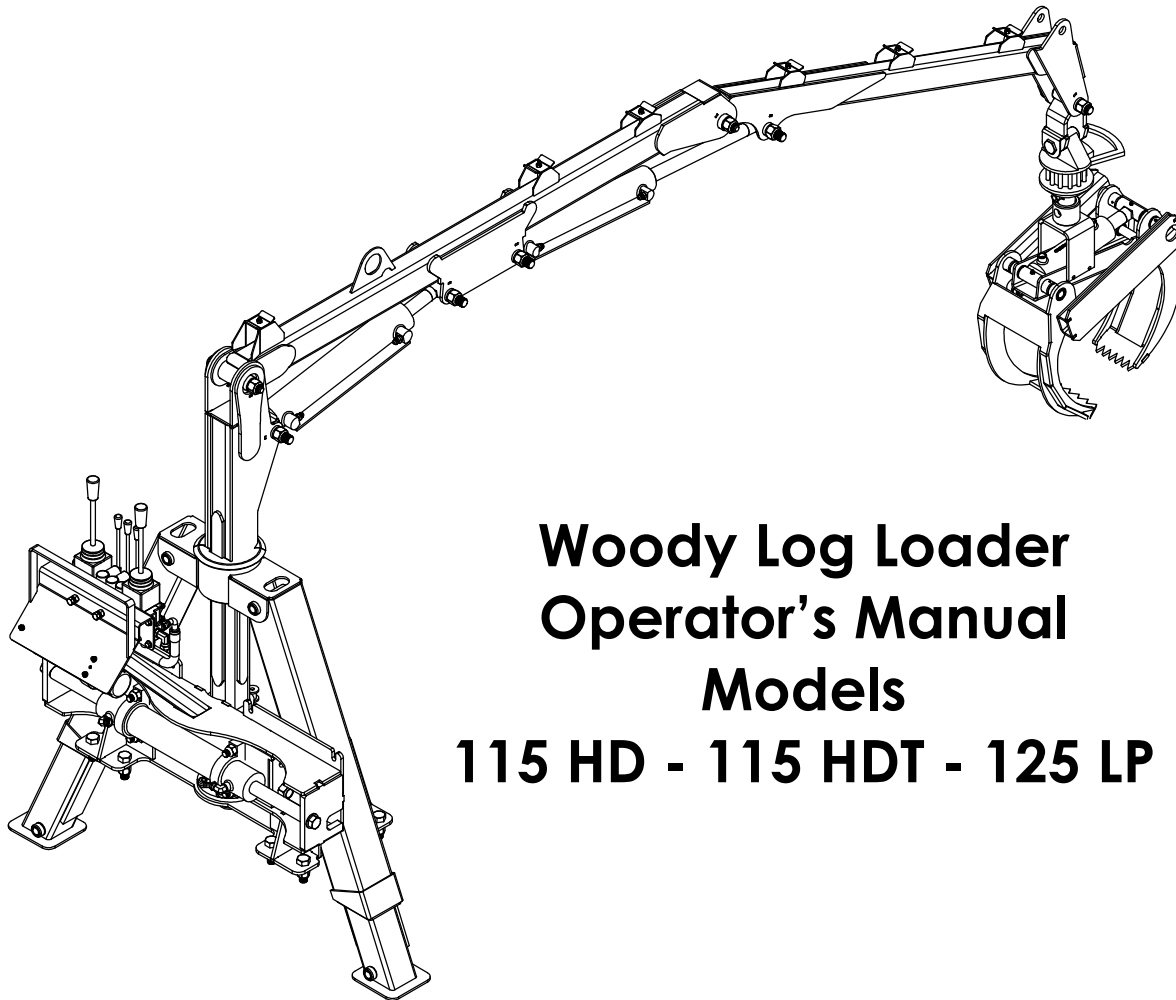

**Woody Log Loader
Operator's Manual
Models
115 HD - 115 HDT - 125 LP**

Woody Equipment Inc., 205 rue Commercial, Saint-Odilon-de-Cranbourne, Quebec, Canada G0S3A0
T. (418) 464-2748 F. (418) 464-2746 - Email: slabbe@equipementswoody.com
Website: www.equipementswoody.com / Facebook: Équipements Woody



Woody Equipment Inc.

Owners: Jerome and Sebastien Labbe

205 rue Commerciale
Saint-Odilon-de-Cranbourne
Beauce-Nord, Quebec,
Canada G0S 3A0

T. (418) 464-2748

F. (418) 464-2746

Email: slabbe@equipementswoody.com

Website: www.equipementswoody.com

Facebook: Les Equipements Woody

Woody Equipment Inc.

© All Rights Reserved: Woody Equipment Inc. of Saint-Odilon-de-Cranbourne.
No part of this manual may be reproduced in any form without the written permission of Woody Equipment Inc.



Table of contents

Introduction.....	1
Warning.....	2
Characteristic of the loader 115HD (Old models).....	3
115HD Loader Parts List (Old models).....	4
Characteristic of the loader 115HD (New models).....	5
115HD Loader Parts List (New models).....	6
Characteristic of the loader 115 HDT (Old models).....	7
115 HDT Loader Parts List (Old models).....	8
Characteristic of the loader 115 HDT (New models).....	9
115 HDT Loader Parts List (New models).....	10
Characteristic of the loader 125 LP (Old models).....	11
125 LP Loader Parts List (Old models).....	12
Characteristic of the loader 125 LP (New models).....	13
125 LP Loader Parts List (New models).....	14
Characteristic of the Control valve.....	15
Characteristic of the trailer 10-66 tires 11L15.....	16
Characteristic of the trailer 10-66 tires 12.5L15.....	17
Characteristic of the trailer 10-66LP tires 11L15.....	18
Characteristic of 5000 lbs Hub assembly.....	19
Forestry Trailer (Older models).....	20
Gravel Bin assembly.....	21-22
Parts list Grapple 36" (New model).....	23
Parts list Grapple 36" (Old model).....	24
Parts list 6000 lbs Winch high.....	25-26
Parts list 6000 lbs Winch low.....	27
Parts list Dipper Dredger 24" for Grapple 36".....	28
Parts list Conduite simple directional.....	29
Parts list Conduite medium pole removable.....	30
Parts list Power Unite.....	31-32
Parts list Hydraulic hoses.....	33
Parts list Gravel bin.....	34
Operation.....	35-36
Safety Instructions.....	37-43
Guarantee.....	44-45



Introduction

Congratulations on your purchase of a Woody Log Loader. Woody Equipment designs and manufactures equipment according to very strict criteria. This equipment is intended for professional use in the agricultural and forestry sectors.

Even if you have experience with this type of product, we recommend that you read these instructions carefully. These instructions contain important information on safety and efficiency and to ensure the validity of the factory guarantee.

Woody Equipment reserves the right to modify and / or improve its equipment and maintenance instructions, as well as to revise data without notice.



Write down the serial number, model number, purchased date, dealer name, and sales representative's name. Keep this information available for ordering parts as well as for any technical assistance or warranty issue.

Serial number	
Model number	
Purchased date	
Dealer	
Sales representative	



Warning



The following symbols used in this manual are to warn the operator of the dangers connected to the use of this machinery. Follow the safety instructions to avoid any risk of serious injury or death.

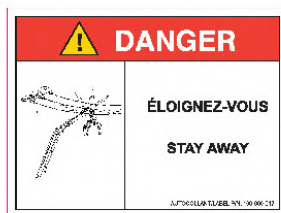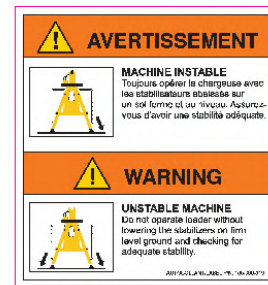



115-HD Part List - Loader

(Models 2020 and olders)

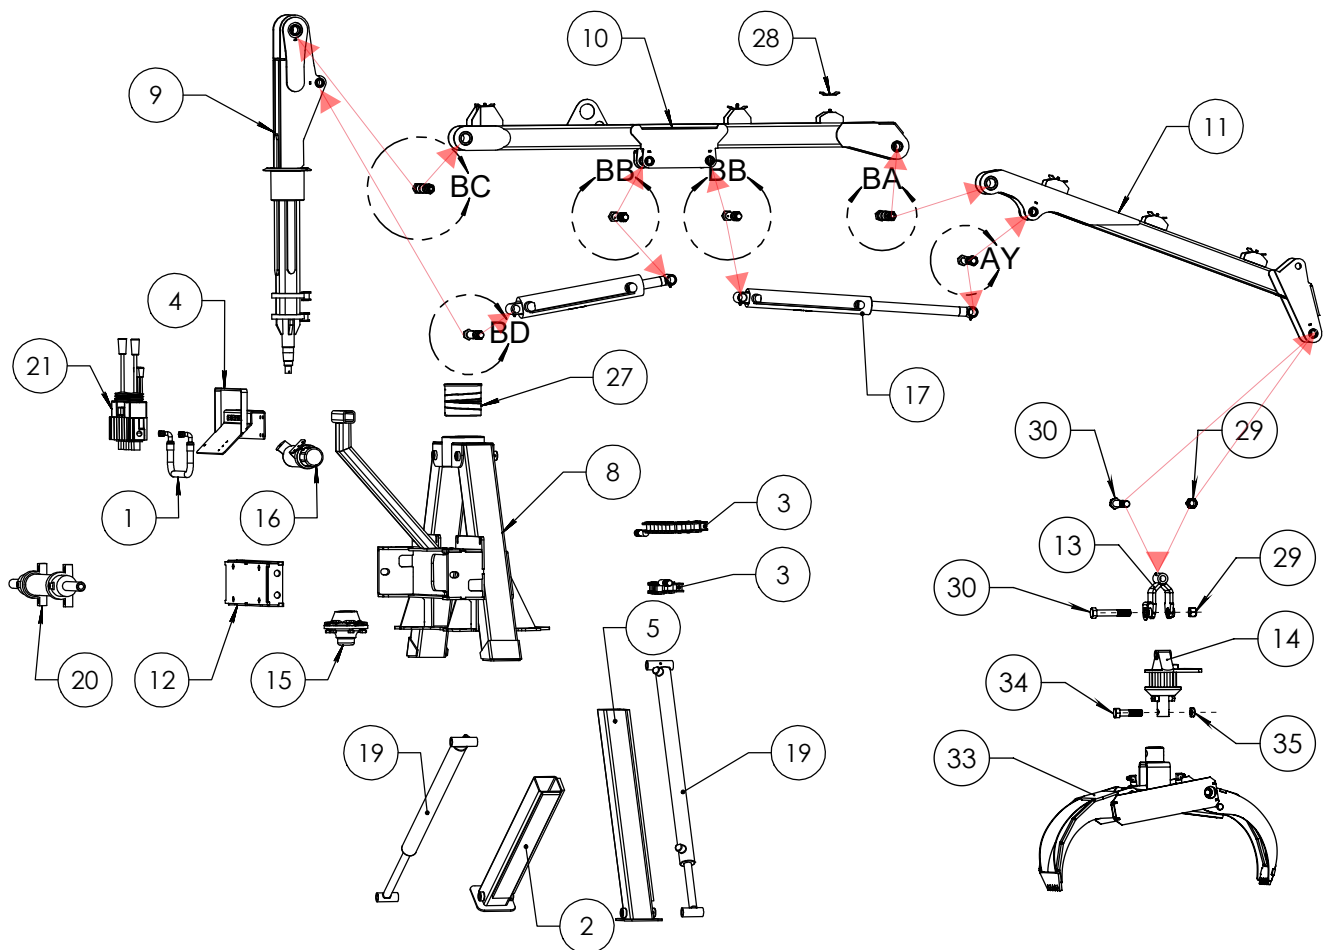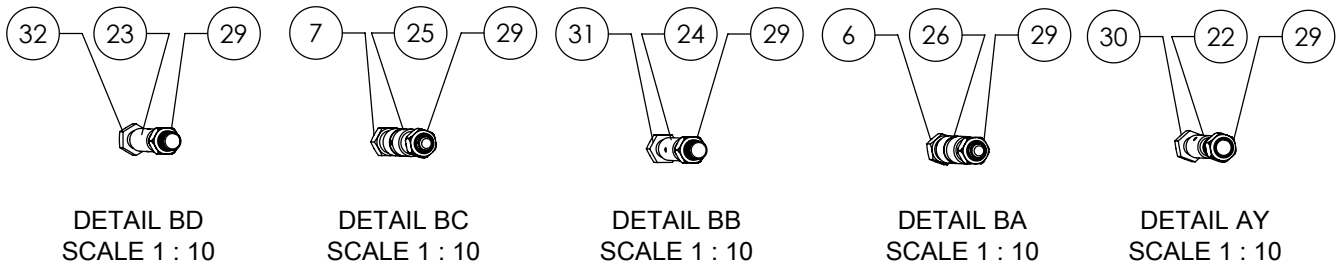

See parts table on page 4




115 HD Loader Part List

No.	Part #	Description	Qty
1	140040-020-100600-100600	Hydraulic Hose Assembly 1/2" - 20" Lenght	1
2	60-012-06	Telescopic leg loader 115-125 LP	1
3	60-003-08	Rotation chain for 115-125	2
4	60-010-04	Valve control support Loader 115, 125, 130 ,150 & 170	1
5	60-012-05	Telescopic leg loader 115-125 LP	1
6	60-012-07	Pivot pin small to large Boom Loader 115, 125	1
7	60-012-08	Pivot pin Boom to Tower Loader 115, 125	1
8	60-021-15	A-Frame Loader 115 HD	1
9	60-021-02	Main Tower Loader	1
10	60-021-03	Large boom Loader 115 HD	1
11	60-021-04	Small boom Loader 115 HD	1
12	60-021-16	Swing drawer Loader 115-125	1
13	57-000-04	Grappler link	1
14	199309	Rotor GR-30	1
15	306201	Wheel hub (see page 19)	1
16	400500	Document holder	1
17	120322	Hydraulic cylinder 2 1/2" x 16" Stroke	1
18	120483	Hydraulic cylinder 3" x 16" Stroke	1
19	120212	Hydraulic cylinder 2" x 30" Stroke	2
20	121090	Hydraulic cylinder double 3" X 16"	1
21	130240	Monoblock Control Valve Q30/7 (see page 15)	1
22	89-20-16-36-D18-00	Plastic bushing 1 1/4" O.D.	1
23	89-20-16-52-D26-00	Plastic bushing 1 1/4" O.D.	1
24	89-20-16-44-D22-00	Plastic bushing 1 1/4" O.D.	2
25	89-24-20-56-D28-00	Plastic bushing 1 1/2" O.D.	1
26	89-24-20-48-D24-00	Plastic bushing 1 1/2" O.D.	1
27	60-012-028	Plastic rotating socket	1
28	60-000-060	Hose lock	6
29	301500	Nylon nut 1"-8	7
30	300320	Bolt 1"-8 x 6" Lenght	1
31	300330	Bolt 1"-8 x 6 1/2" Lenght	2
32	300340	Bolt 1"-8 x 7" Lenght	1
33	57-002	Grapple 36" (see page 24)	1
34	300445	Bolt 3/4"-10 x 3 3/4" Lenght	1
35	301540	Nylon nut 3/4"-10	1




115 HD Loader - Part List


(Models 2020 and reconds)

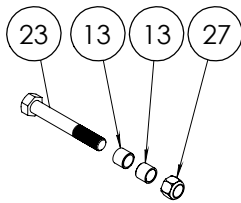


DETAIL BD
SCALE 1 : 15

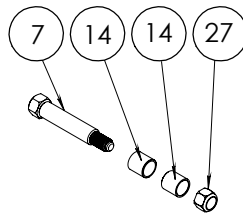


DETAIL BC
SCALE 1 : 15

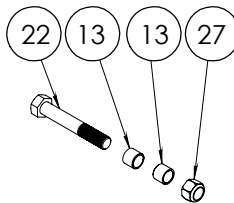


DETAIL BB
SCALE 1 : 15

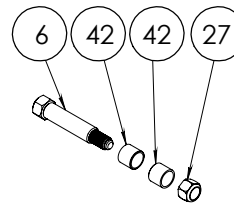

DETAIL BA
SCALE 1 : 15

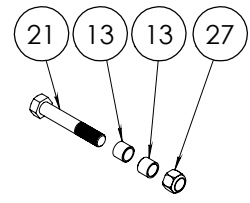

DETAIL AY
SCALE 1 : 15

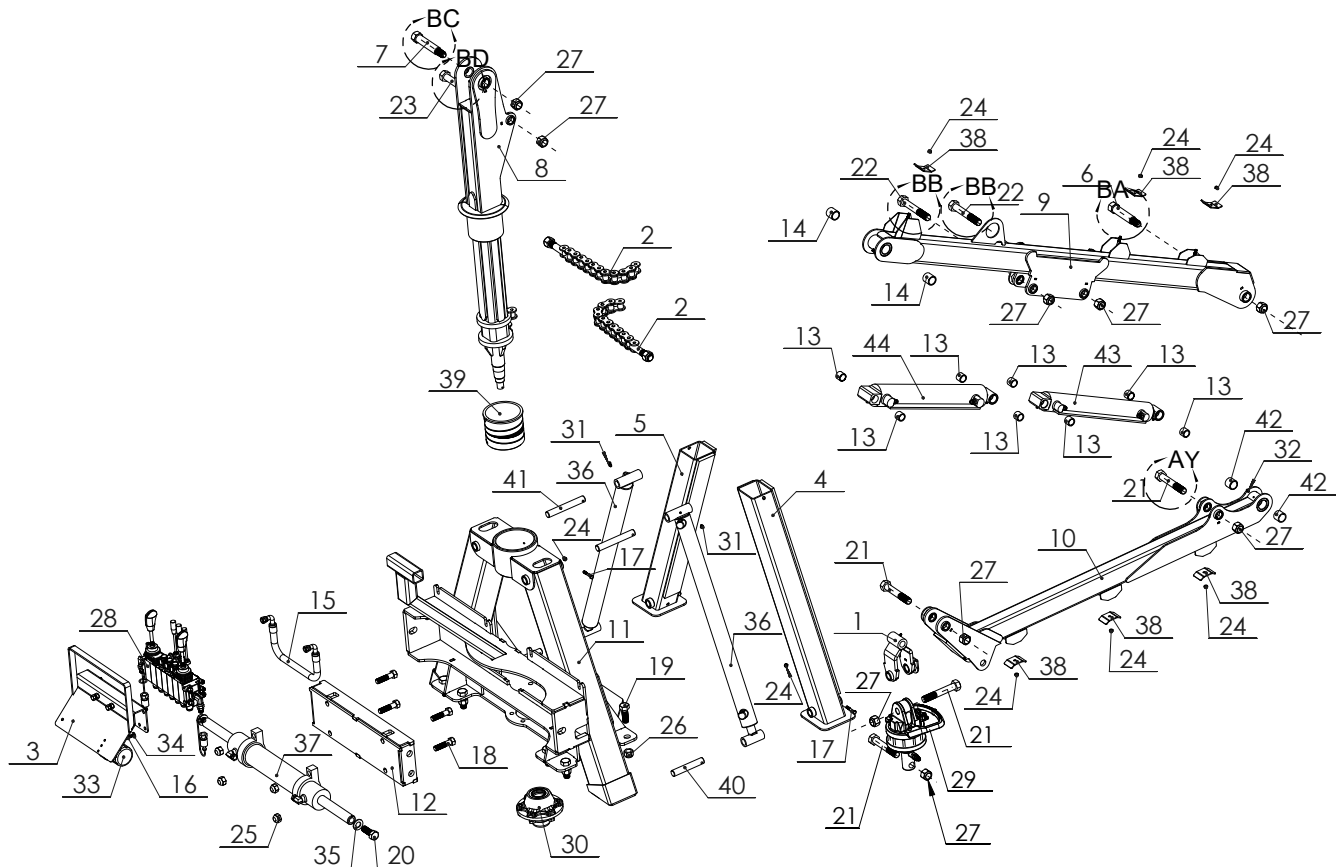




115 HD Loader Parts List

Item	Part #	Description	Qty
1	57-000-04	Grappler link 36"/42"/52"	1
2	60-003-08	Rotation chain for 115-125	2
3	60-010-04	Valve control support Loader 115, 125, 130, 150 & 170	1
4	60-012-05	Telescopic leg loader 115-125 LP	1
5	60-012-06	Telescopic leg loader 115-125 LP	1
6	60-012-07	Pivot pin small to large Boom Loader 115, 125	1
7	60-012-08	Pivot pin Boom to Tower Loader 115, 125	1
8	60-021-02	Main Tower Loader	1
9	60-021-03	Large boom Loader 115 HD	1
10	60-021-04	Small boom Loader 115 HD	1
11	60-021-15	A-Frame Loader 115 HD	1
12	60-021-16	Swing drawer Loader 115-125	1
13	111000	Bushing 1 x 1.25 x 1	8
14	111012	Bushing 1.25 x 1.5 x 1.5	2
15	140040-020-100600-100600	Hydraulic hose assembly 1/2" - 20" Length	1
16	300700	Bolt 5/16"-18 x 1" Length	4
17	300730	Bolt 5/16"-18 x 2" Length	4
18	B-12-10-48-32	Bolt 3/4"-10 x 3" Length	4
19	301010	Bolt 7/8"-9 x 2 1/2" Length	8
20	301011	Bolt 7/8"-14 UNF X 2 1/2" Length X 2 1/2" Thread	2
21	300320	Bolt 1"-8 x 6" Length	2
22	300330	Bolt 1"-8 x 6 1/2" Length	2
23	300340	Bolt 1"-8 x 7" Length	1
24	301560	Nylon nut 5/16"-18	10
25	301540	Nylon nut 3/4"-10	4
26	301590	Nylon nut 7/8"-9	8
27	301500	Nylon nut 1"-8	9
28	130240	Monoblock Control valve 7 sections Q30 (see page 15)	1
29	199309	Rotor GR 30	1
30	306201	Wheel hub (see page 19)	1
31	310010	Grease nipple 90 degrees 1/4"-28	2
32	310020	Grease nipple right 1/4"-28	4
33	400500	Document holder	1
34	301350	Flat Washer 3/8" Narrow	4
35	301380	Flat Washer 7/8" Narrow	2
36	120212	Hydraulic cylinder 2" Dia. x 30" Stroke	2
37	121090	Hydraulic cylinder double 3" Dia. X 16" Stroke	1
38	60-000-060	Hose lock	6
39	60-012-028	MOS2 Rotating sleeve Loader 115HD	1
40	86-16-92-E08-00	Pin 1" O.D.	2
41	86-16-112-E08-00	Pin 1" O.D.	2
42	111012 coupé 1 1/4	Bushing 1.25 x 1.5 x 1.5 (1 1/4 Length)	2
43	120322	Hydraulic cylinder 2 1/2" Dia. x 16" Stroke	1
44	120483	Hydraulic cylinder 3" Dia. x 16" Stroke	1



115 HDT Loader - Parts List

(Models 2020 and olders)

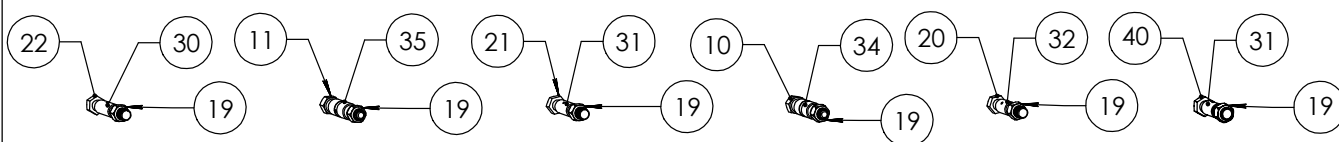

DETAIL AV
SCALE 1 : 16


DETAIL AU
SCALE 1 : 16

DETAIL AT
SCALE 1 : 16

DETAIL AR
SCALE 1 : 16

DETAIL AP
SCALE 1 : 16

DETAIL AS
SCALE 1 : 16

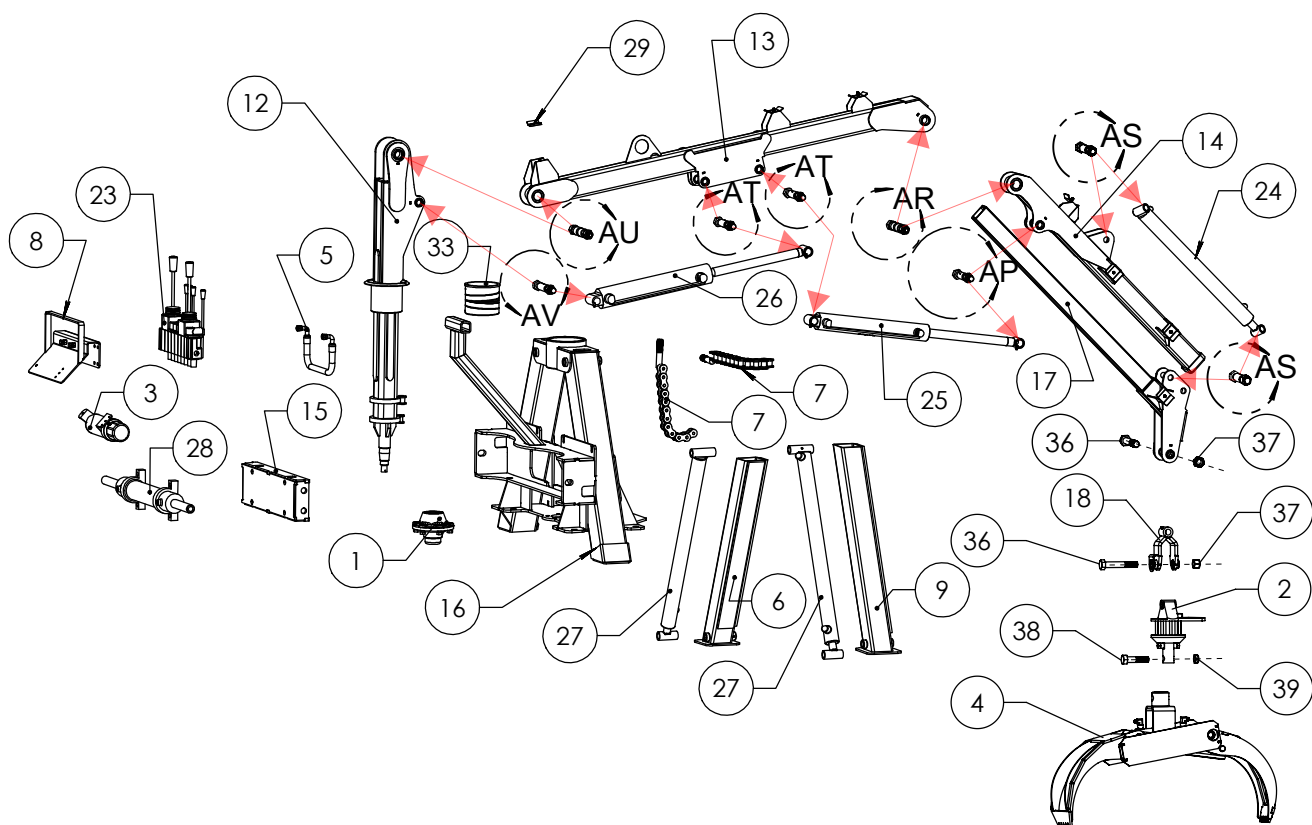




115 HDT Loader Parts List

Item	Part #	Description	Qty
1	306201	Wheel bearing (see page 19)	1
2	199309	GR 30 Rotor	1
3	400500	Document holder	1
4	57-002	36" Grapple (see page 24)	1
5	140040-020-100600-100600	Hose assembly 1/2" - 20" long	1
6	60-012-06	Loader telescopic stabilizer 115, 125 LP	1
7	60-003-08	Rotation chain 115, 125	2
8	60-010-04	Loader control valve support 115, 125, 130, 150 & 170	1
9	60-012-05	Loader telescopic stabilizer 115, 125 LP	1
10	60-012-07	Stick boom pin 115, 125	1
11	60-012-08	Main boom pin - 115, 125	1
12	60-021-02	Loader column	1
13	60-027-02	Loader main boom 115 HDT	1
14	60-027-01	Loader stick boom 115 HDT	1
15	60-021-16	Loader swing slider 115-125	1
16	60-021-15	Loader A-Frame 115 HD	1
17	60-027-03	Telescope 115	1
18	57-000-04	Grapple yoke	1
19	301500	Nylon nut 1"-8	8
20	300320	Bolt 1"-8 x 6" long	1
21	300330	Bolt 1"-8 x 6 1/2" long	2
22	300340	Bolt 1"-8 x 7" long	1
23	130250	Anti-shock Q30/8 control (see page 15)	1
24	120190	Hydraulic cylinder 2" x 24" stroke	1
25	120322	Hydraulic cylinder 2 1/2" x 16" stroke	1
26	120483	Hydraulic cylinder 3" x 16" stroke	1
27	120212	Hydraulic cylinder 2" x 30" stroke	2
28	121090	Double action hydraulic cylinder 3" X 16"	1
29	60-000-060	Hose lock	7
30	89-20-16-52-D26-00	Plastic tubing 1 1/4" O.D.	1
31	89-20-16-44-D22-00	Plastic tubing 1 1/4" O.D.	4
32	89-20-16-36-D18-00	Plastic tubing 1 1/4" O.D.	1
33	60-012-028	Rotation plastic sleeve	1
34	89-24-20-48-D24-00	Plastic tubing 1 1/2" O.D.	1
35	89-24-20-56-D28-00	Plastic tubing 1 1/2" O.D.	1
36	300320	Bolt 1"-8 x 6" Length	1
37	301500	Nylon nut 1"-8	1
38	300445	Bolt 3/4"-10 x 3 3/4" Length	1
39	301540	Nylon nut 3/4"-10	1
40	300310	Bolt 1"-8 x 5" Length	2



115 HDT Loader - Parts List

(Models 2021 and recents)

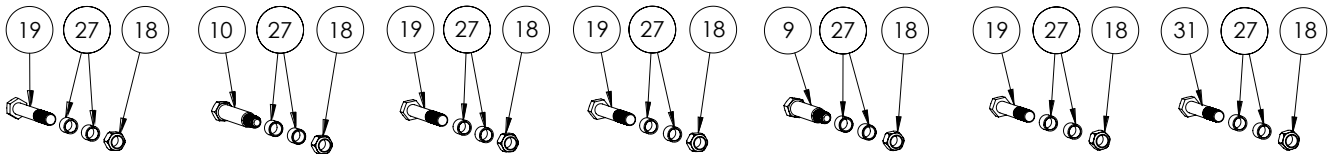

DETAIL A
SCALE 1 : 10

DETAIL B
SCALE 1 : 10


DETAIL C
SCALE 1 : 10

DETAIL D
SCALE 1 : 10

DETAIL E
SCALE 1 : 10

DETAIL F
SCALE 1 : 10

DETAIL G
SCALE 1 : 10

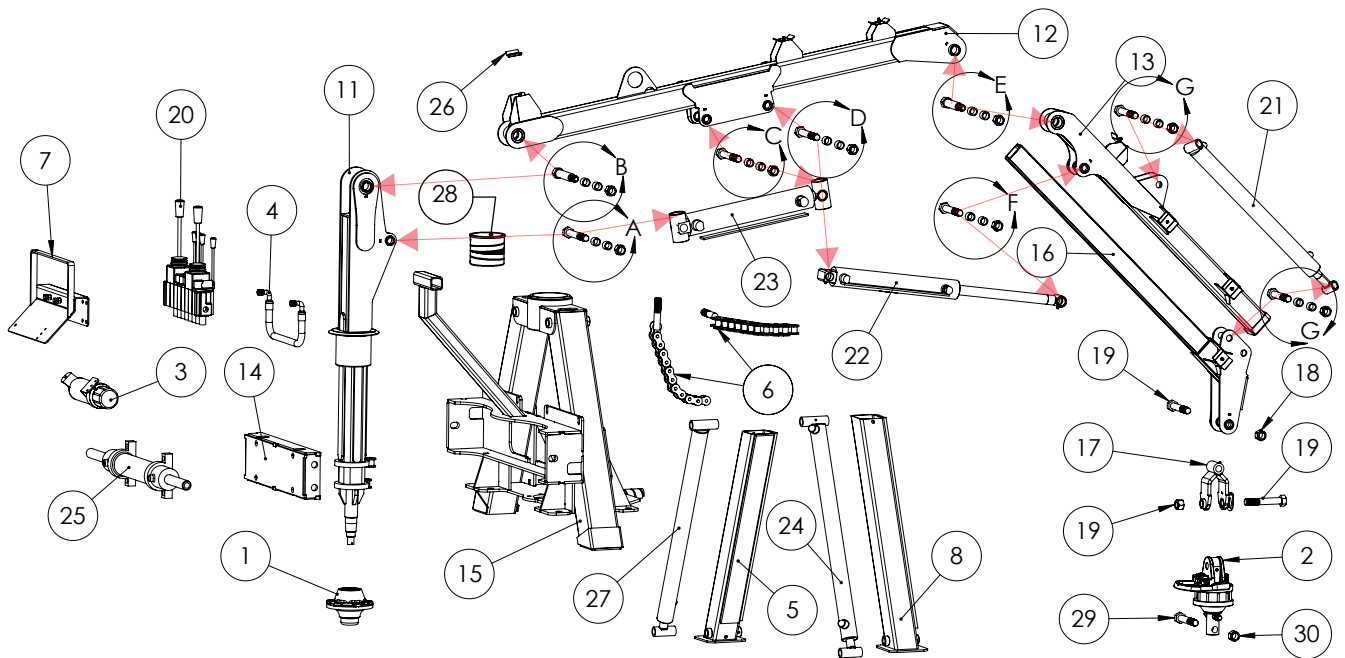




115 HDT Loader Parts List

No.	Part #	Description	Quantity
1	306201	Wheel hub (see page 19)	1
2	199309	Rotor GR30	1
3	400500	Document holder	1
4	140040-020-100600-100600	Hydraulic hose assembly 1/2" - 20" Length	1
5	60-012-06	Telescopic leg loader 115-125 LP	1
6	60-003-08	Rotation chain for 115-125	2
7	60-010-04	Valve control support Loader 115, 125, 130, 150 & 170	1
8	60-012-05	Telescopic leg loader 115-125 LP	1
9	60-012-07	Pivot pin small to large Boom Loader 115, 125	1
10	60-012-08	Pivot pin Boom to Tower Loader 115, 125	1
11	60-021-02	Main Tower Loader	1
12	60-027-02	Large Boom Chargeuse 115 HDT	1
13	60-027-01	Small Boom Chargeuse 115 HDT	1
14	60-021-16	Swing drawer Loader 115-125	1
15	60-021-15	A-Frame Loader 115 HD	1
16	60-027-03	Telescopic boom for chargeuse 115HDT	1
17	57-000-04	Grappler link 36"/42"/52"	1
18	301500	Nylon nut 1"-8	8
19	300320	Bolt 1"-8 x 6" Lenght	8
20	130250	Valve Control Q30/8 with anti-shock (see page 15)	1
21	120190	Hydraulic cylinder 2" x 24" Stroke	1
22	120322	Hydraulic cylinder 2 1/2" x 16" Stroke	1
23	120483	Hydraulic cylinder 3" x 16" Stroke	1
24	120212	Hydraulic cylinder 2" x 30" Stroke	2
25	121090	Hydraulic cylinder double 3" X 16"	1
26	60-000-060	Hose lock	7
27	111000	Plastic bushing 1 x 1.25 x 1	1
28	60-012-028	MOS2 Rotating sleeve Loader 115HD	1
29	300445	Bolt 3/4"-10 x 3 3/4" Lenght	1
30	301540	Nylon nut 3/4"-10	1
31	300310	Bolt 1"-8 x 5" Lenght	2




125-LP Loader - Part List


(Models 2020 and older)

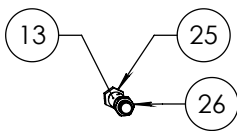


DETAIL AN
SCALE 1 : 15

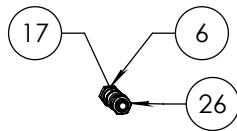


DETAIL AM
SCALE 1 : 15

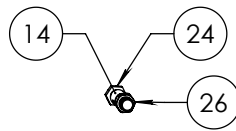


DETAIL AL
SCALE 1 : 15

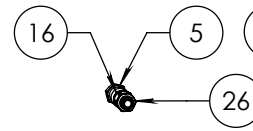

DETAIL AK
SCALE 1 : 15

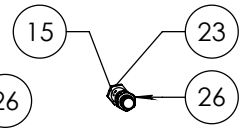

DETAIL AJ
SCALE 1 : 15

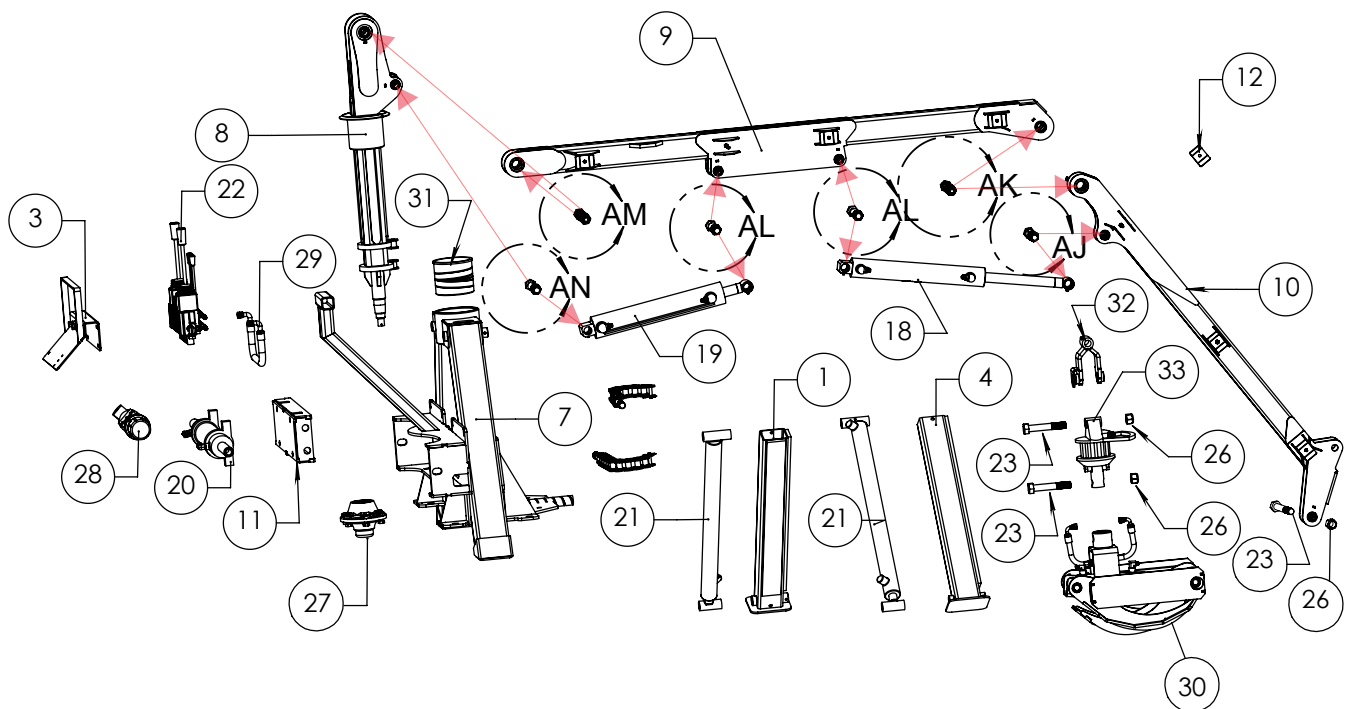




125-LP Loader Part List

No.	Part #	Description	Quantity
1	60-012-06	Telescopic leg loader 115-125 LP	1
2	60-003-08	Rotation chain for 115-125	2
3	60-010-04	Valve control support Loader 115, 125, 130, 150 & 170	1
4	60-012-05	Telescopic leg loader 115-125 LP	1
5	60-012-07	Pivot pin small to large Boom Loader 115, 125	1
6	60-012-08	Pivot pin Boom to Tower Loader 115, 125	1
7	60-033-01	A-Frame Loader 125LP	1
8	60-033-02	Main Tower Loader 125LP	1
9	60-033-03	Large boom Loader 125LP	1
10	60-033-04	Small boom Loader 125LP	1
11	60-021-16	Swing drawer Loader 115-125	1
12	60-000-060	Hose lock	6
13	89-20-16-52-D26-00	Plastic bushing 1 1/4" O.D.	1
14	89-20-16-44-D22-00	Plastic bushing 1 1/4" O.D.	2
15	89-20-16-36-D18-00	Plastic bushing 1 1/4" O.D.	1
16	89-24-20-48-D24-00	Plastic bushing 1 1/2" O.D.	1
17	89-24-20-56-D28-00	Plastic bushing 1 1/2" O.D.	1
18	120322	Hydraulic cylinder CU 2516-0296	1
19	120483	Hydraulic cylinder CU 3016-0298 pour 115HD	1
20	121090	Double hydraulic cylinder 3" Dia. x 16" Stroke	1
21	120212	Hydraulic cylinder 2" Dia. x 30" Stroke	2
22	130240	Monoblock Control valve Q30/7 with anti-shock (see page 15)	1
23	300320	Bolt 1"-8 x 6" Lenght	4
24	300330	Bolt 1"-8 x 6 1/2" Lenght	2
25	300340	Bolt 1"-8 x 7" Lenght	1
26	301500	Nylon nut 1"-8	9
27	306201	Wheel hub (see page 19)	1
28	400500	Document holder	1
29	140040-020-100600-100600	Hose assembly 1/2" - 20" Lenght	1
30	57-002	Grapple 36" (see page 24)	1
31	60-012-028	Plastic rotating socket	1
32	57-000-04	Grappler link	1
33	199309	Rotor GR-30	1




125 LP Loader - Parts List


(Models 2021 and older)

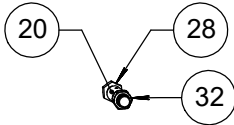


DETAIL AN
SCALE 1 : 15

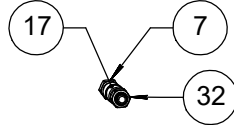


DETAIL AM
SCALE 1 : 15

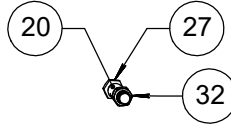


DETAIL AL
SCALE 1 : 15

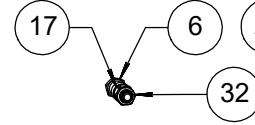

DETAIL AK
SCALE 1 : 15

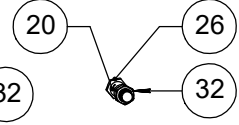


DETAIL AJ
SCALE 1 : 15

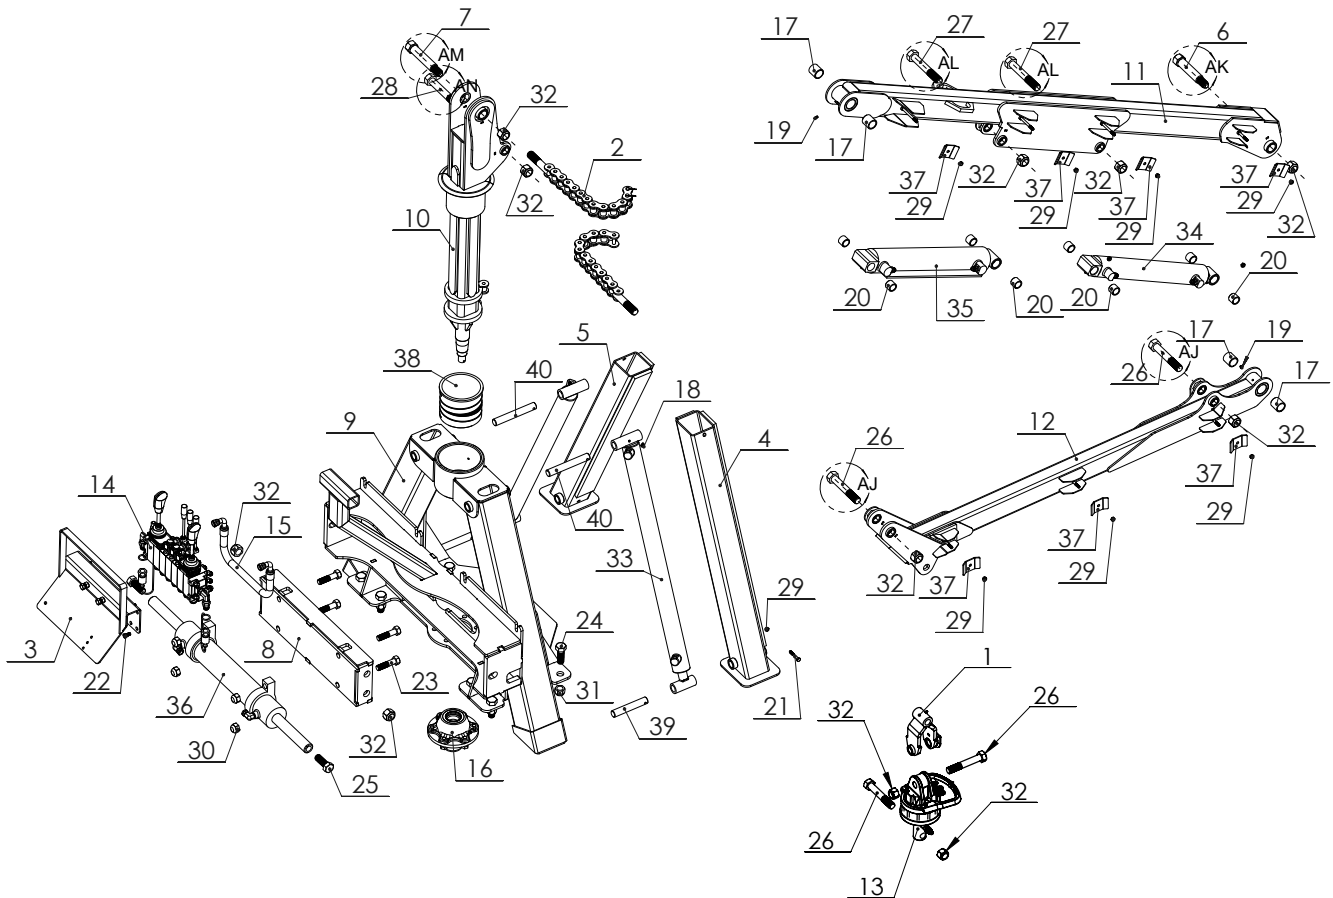



125 LP Loader Parts List

Item	Part #	Description	Qty
1	57-000-04	Grappler link 36"/42"/52"	1
2	60-003-08	Rotation chain for 115-125	2
3	60-010-04	Valve control support Loader 115, 125, 130 ,150 & 170	1
4	60-012-05	Telescopic leg loader 115-125 LP	1
5	60-012-06	Telescopic leg loader 115-125 LP	1
6	60-012-07	Pivot pin small to large Boom Loader 115, 125	1
7	60-012-08	Pivot pin Boom to Tower Loader 115, 125	1
8	60-021-16	Swing drawer Loader 115-125	1
9	60-033-01	A-Frame 125LP	1
10	60-033-02	Main tower 125LP	1
11	60-033-03	Large boom loader 125LP	1
12	60-033-04	Small boom loader 125LP	1
13	199309	Rotor GR 30	1
14	130240	Monoblock Control valve 7 sections Q30 (see page 15)	1
15	140040-020-100600-100600	Hydraulic hose assembly 1/2" - 20" Length	1
16	306201	Wheel hub (see page 19)	1
17	111012	Bushing 1.25 x 1.5 x 1.5	4
18	310010	Graisser 90 degré 1/4"-28	2
19	310020	Grease nipple 90 degrees 1/4"-28	4
20	111000	Bushing 1 x 1.25 x 1	8
21	300730	Bolt 5/16"-18 x 2" Lenght	4
22	300560	Bolt 3/8"-24 X 3/4" UNF Lenght X 3/4" Thread	4
23	300420	Bolt 3/4"-10 x 3" Lenght	4
24	301010	Bolt 7/8"-9 x 2 1/2" Lenght	8
25	301011	Bolt 7/8"-14 UNF X 2 1/2" Lenght X 2 1/2" Threah	2
26	300320	Bolt 1"-8 x 6" Lenght	2
27	300330	Bolt 1"-8 x 6 1/2" Lenght	2
28	300340	Bolt 1"-8 x 7" Lenght	1
29	301560	Nylon nut 5/16"-18	13
30	301540	Nylon nut 3/4"-10	4
31	301590	Nylon nut 7/8"-9	8
32	301500	Nylon nut 1"-8	9
33	120212	Hydraulic cylinder 2" Dia. x 30" Stroke	2
34	120322	Hydraulic cylinder 2 1/2" Dia. x 16" Stroke	1
35	120483	Hydraulic cylinder 3" Dia. x 16" Stroke	1
36	121090	Hydraulic cylinder double 3" Dia. X 16" Stroke	1
37	60-000-060	Pipe lock	7
38	60-012-028	MOS2 Rotating sleeve Loader 115HD	1
39	86-16-92-E08-00	Pin 1" O.D.	2
40	86-16-112-E08-00	Pin 1" O.D.	2

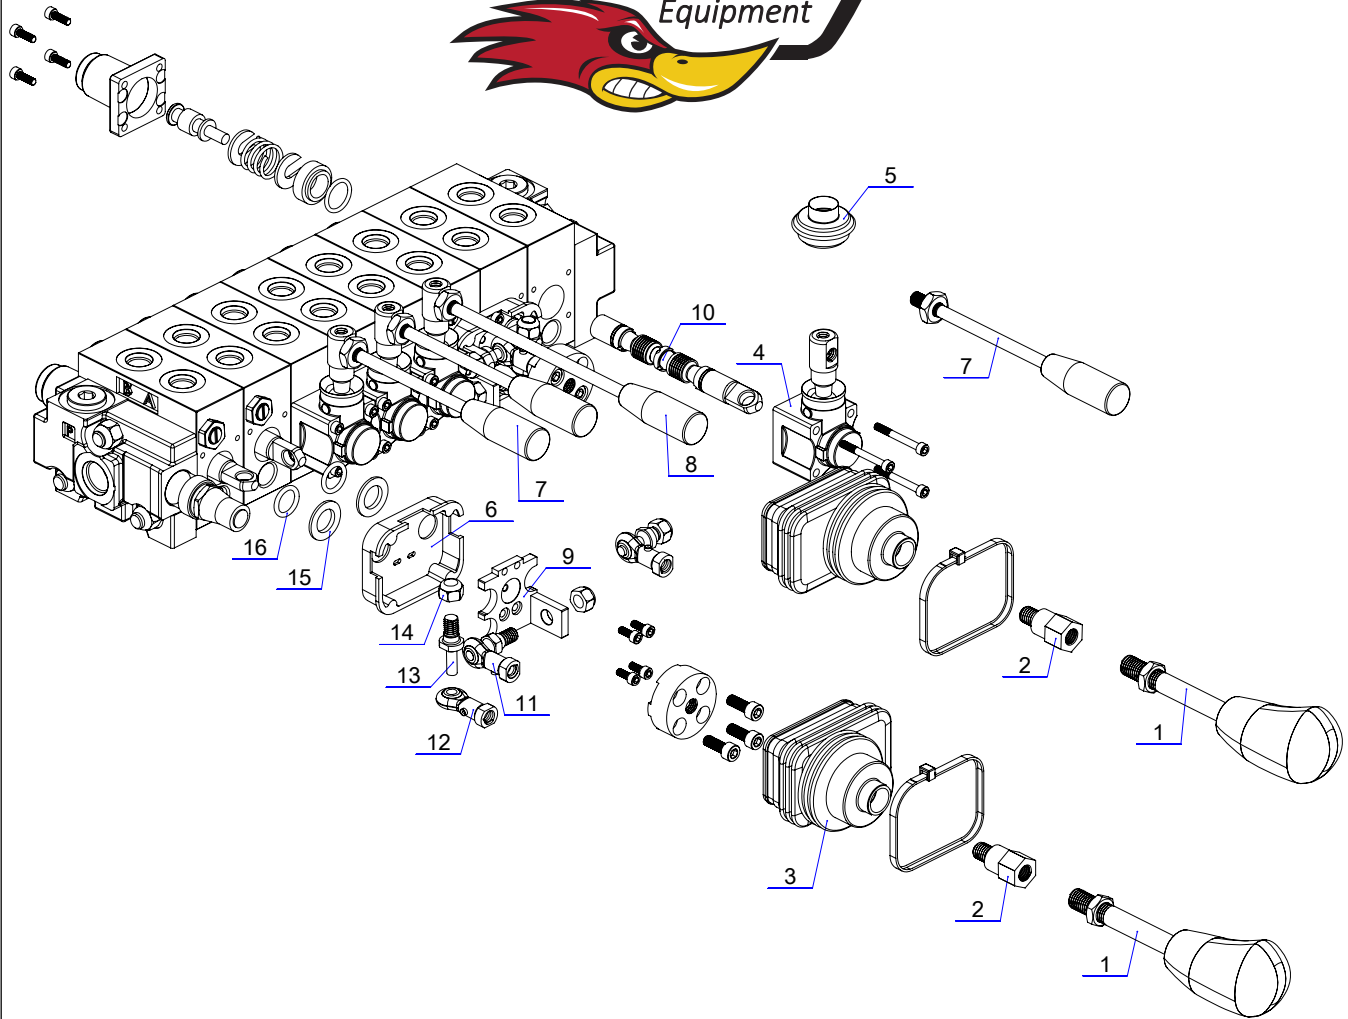


8 Sections Valve Q30
GA 8 sections valve Q30 03008010304390E
Part List

No	Part #	Description	Quantity
1	130035	Joystick's arm Q30 GA with big handle	2
2	130317	GA Lift Adapter A15-A35 Q30-25-45	2
3	130030	Big Boots Joystick Q30-Q130 GA	2
4	130015	GA Galtech Lever Box	4
5	130020	GA Lever Box Small Boots	1
6	130300	GA Joystick Plate NEW MODEL	2
7	130040	GA Short arm Q30 160MM for individual section	3
8	130050	GA Long arm Q 30 210MM for individual section	1
9	130131,130132	GA plate A35-34R LEFT new version	1
10	130290, 130291	SPOOL/TIROIR double action open center cylinder threaded on both ends Q25/Q30 old model	5
11	130310	GA PIN FOR NIB WITH BALL JOINT ASSEMBLED FOR NEW MODEL	2
12	130100	GA Head RF6	4
13	130080	GA Pin for sliding Old and New Model	4
14	130060	GA Nylon Nuts M8 for Q30/A15	6
15	130000	GA Snap ring/washer spacer GA 06019 2849799	4
16	130001	GA drawer seals A-25-30 OR 70 113	4



10-66 Forestry Trailer with 11L15 Tires Parts List

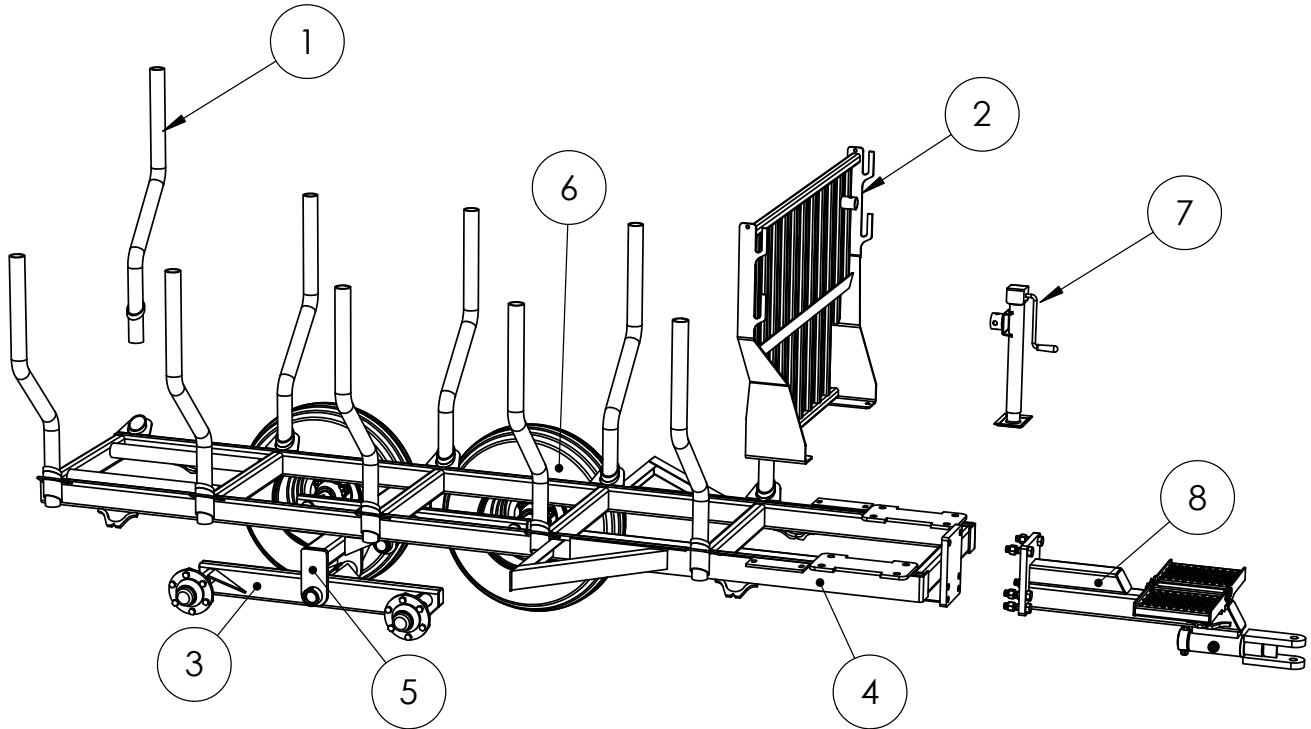


10-66 Forestry Trailer with 11L15 Tires Parts List

Item	Part #	Description	Qty
1	59-00-04	10-66 Trailer post	10
2	59-000-05	Protective grid 38" wide x 38" high	1
3	59-026-03	Tandem trailer	2
4	59-011-01	10-66 Forestry trailer frame - 115 HD	1
5	86-31-285-F12-00	Shaft 1 15/16" O.D.	2
6	302010	11L15 Tire, 8-ply, 6 nuts, 5000 lb.	4
7	303020	Trailer Jack - 6000 or (5000) lb.	1
8	59-076-01	Removable drawbar (Pag. 29)	1



10-66 Forestry Trailer with 12.5L15 Tires Parts List

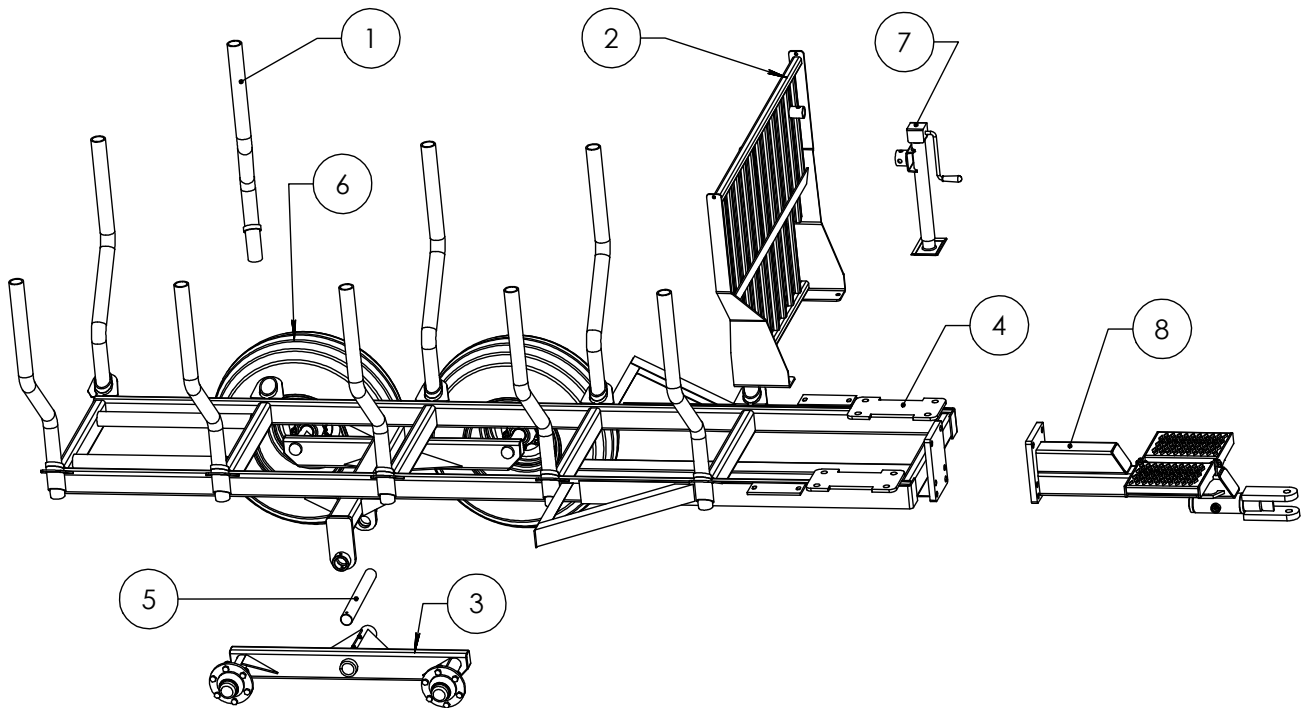


10-66 Forestry Trailer with 12.5L15 Tires Parts List

Item	Part #	Description	Quantity
1	59-000-04	10-66 Trailer post	10
2	59-000-05	Protective grid 38" wide x 38" high	1
3	59-026-03	Tandem trailer	2
4	59-011-01	10-66 Forestry trailer frame - 115 HD	1
5	86-31-285-F12-00	Shaft 1 15/16" O.D.	2
6	302020	12.5L15 Tire, 10-ply, 6 nuts	4
7	303020	Trailer Jack - 6000 or (5000) lbs	1
8	59-076-01	Removable drawbar (see page 29)	1



10-66LP Forestry Trailer 11L15 Tires Parts List

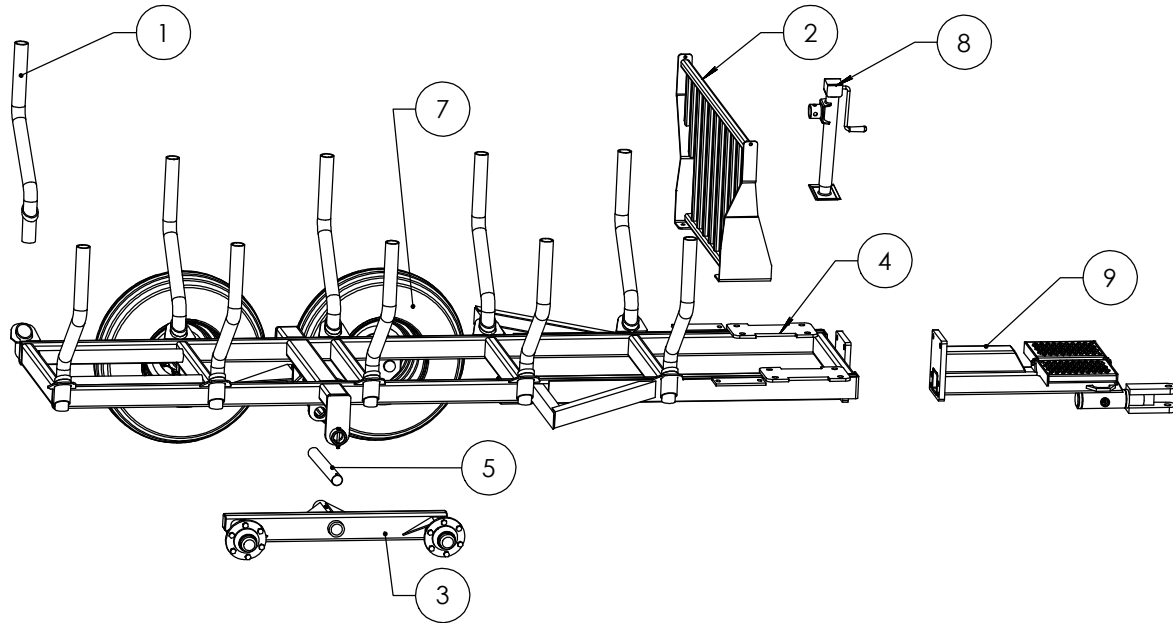


10-66 Forestry Trailer with 11.5L15 Tires Parts List

Item	Part #	Description	Qty
1	59-000-33	10-66 trailer short post	10
2	59-000-32	Protective grid 38" wide x 38" high	1
3	59-026-03	Tandem trailer	2
4	59-175-01	10-66 Forestry trailer frame 125 HD	1
5	86-31-285-F12-00	Shaft 1 15/16" O.D.	2
6	301550	Nylon nut 3/8"-16	2
7	302010	11.5L15 Tire, 8-ply, 6 nuts, 5000 lbs	4
8	303020	Trailer Jack - 6000 or (5000) lbs	1
9	59-076-01	Removable drawbar (see page 29)	1



5000 lbs Hub assembly

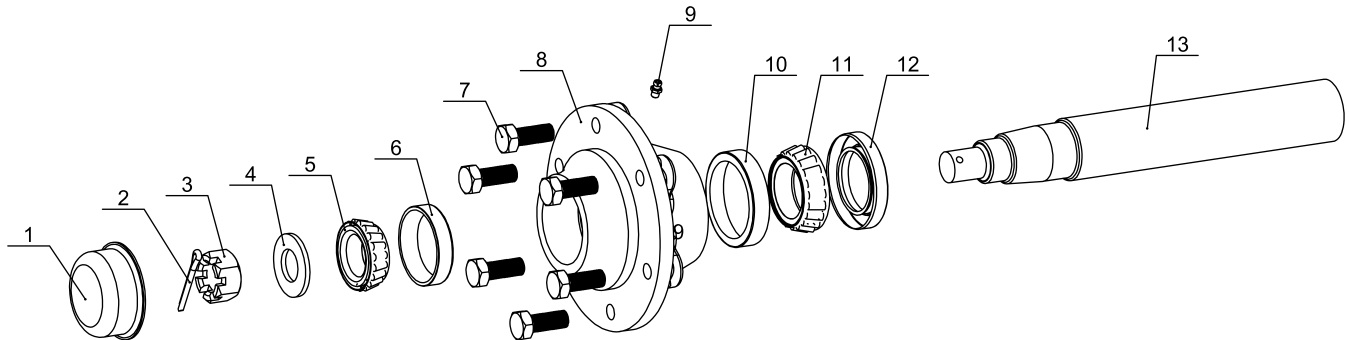


Part list 5000 lbs Hub assembly

No.	Part #	Description	Qty
1	306208	Cap Hub 5000 lbs	1
2	306210	Cotter pin 3/16 dia. X 1 1/2" lg.	1
3	306209	Castle nut	1
4	306214	Washer	1
5	306204	Exterior Bearing LM48548	1
6	306206	Small cone hub 5000 lbs	1
7	306211	Bolt 9/16-18	6
8	306201	Hub 5000 lbs	1
9	310020	Grease fitting 1/4"-28	1
10	306205	Large cone hub 5000 lbs	1
11	306203	Interior Bearing LM603049	1
12	306207	Seal hub	1
12	306202	Spindle	1



Forestry Trailer (Older models)

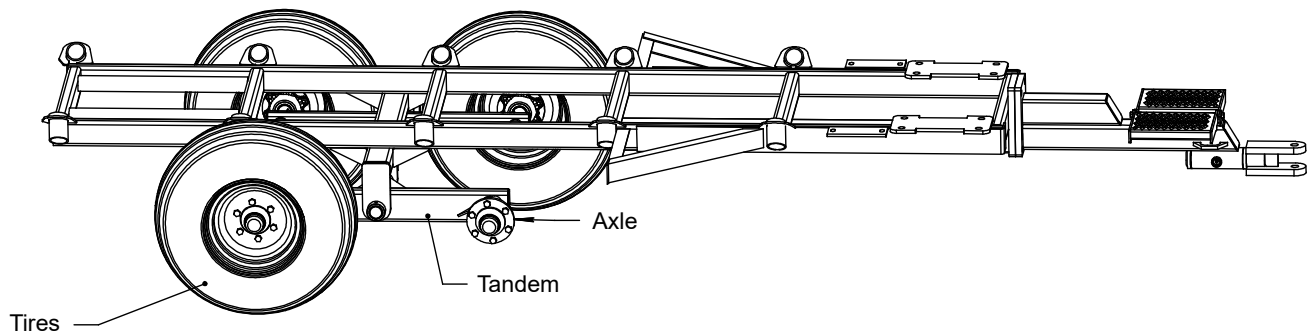


PARTS LIST - FORESTRYTRAILERS (OLDER MODELS)

TRAILER MODEL	PART NO.	TANDEM ASSEMBLY	AXLE	TIRES
11-74	59-013	59-024-03	5000 lbss	12.5L15
11-74	59-150	59-081-02	8000 lbss	385-65-22.5
11-74	59-151	59-082-07	8000 lbss	400-60-15.5
13-78	59-014	59-024-03	5000 lbs	12.5L15
13-78	59-125	59-082-07	8000 lbs	12.5L15
13-78	59-161	59-082-07	8000 lbs	400-60-15.5
13-78	59-081	59-081-02	8000 lbs	16.5L16.1
13-78	59-162	59-081-02	8000 lbs	385-65-22.5
14-80	59-015	59-082-07	8000 lbs	12.5L15
14-80	59-163	59-082-07	8000 lbs	400-60-15.5
14-80	59-079	59-081-02	8000 lbs	16.5L6.1
14-80	59-164	59-081-02	8000 lbs	385-65-22.5



Gravel Bin assembly

Part no. 31-030, 31-040, 31-050, 31-060

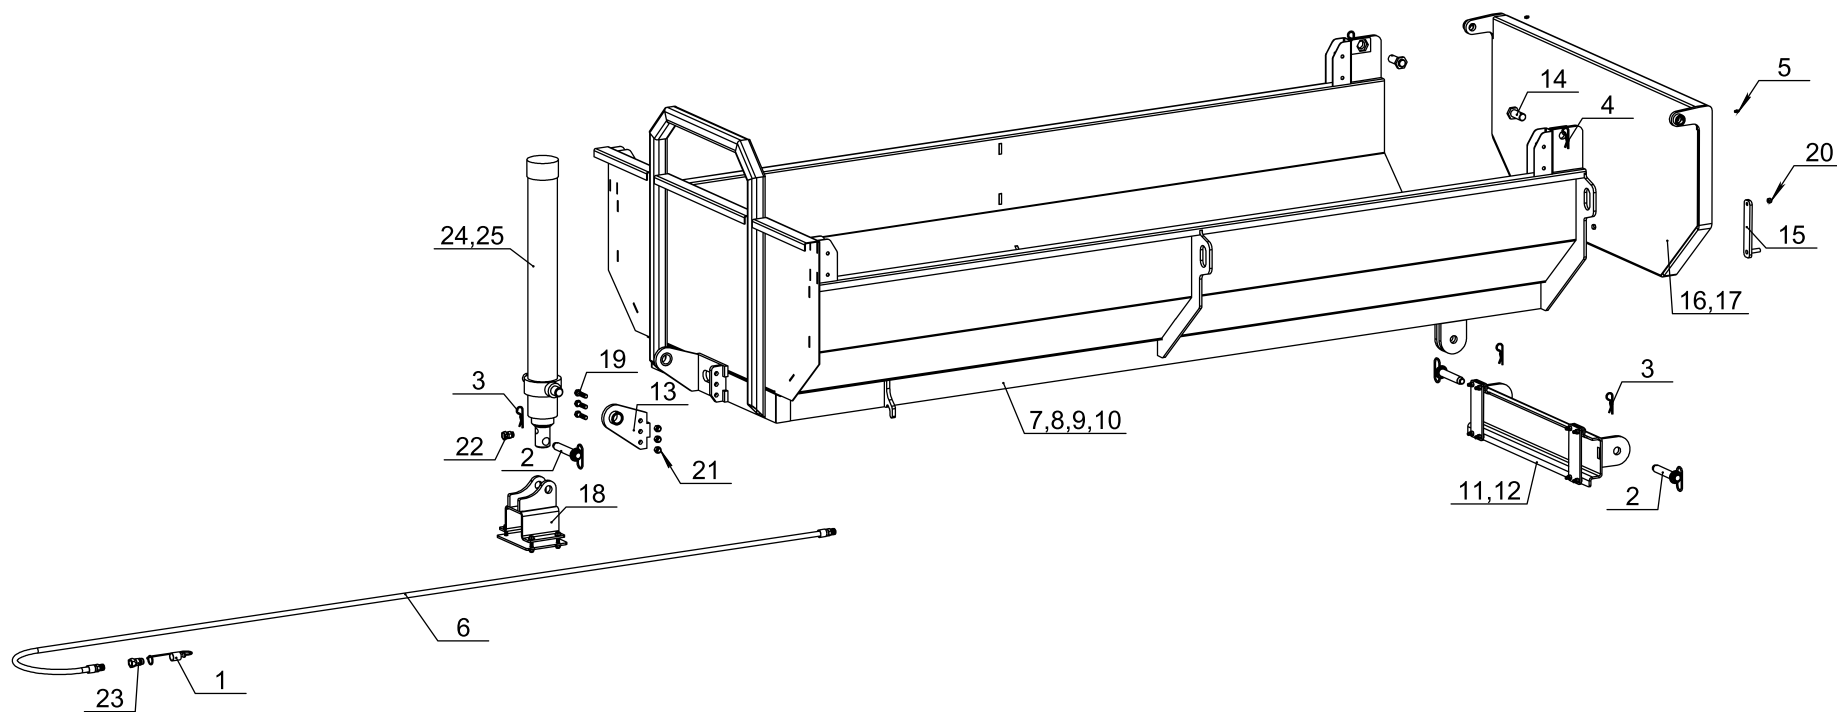




Gravel Bin assembly

Part no. 31-030, 31-040, 31-050, 31-060


PARTS LIST - GRAVEL BIN ASSEMBLY

			10' BIN FOR 10-78 HV TRAILER P/N: 31-030	10' BIN WITH CYLINDER FOR 10-78 HV TRAILER P/N: 31-040	12' BIN FOR 12-86 HV TRAILER P/N: 31-050	12' BIN WITH CYLINDER FOR 12-86 HV TRAILER P/N: 31-060
ITEM	PART NO.	DESCRIPTION	QTY	QTY	QTY	QTY
1	140000	Dust caps 1/2", red	-	1	-	1
2	310830	Quick release pin 1" x 4 3/4" long	2	3	2	3
3	310833	Cotter Pin 5/32 x 2 3/4" long	2	3	2	3
4	310832	Cotter Pin 3"	2	2	2	2
5	310020	Grease fitting 1/4"-28	2	4	2	4
6	140030-144- 101740-101740	Hose assembly 3/8" - 144" long	-	1	-	1
7	31-030-01	Gravel bin for 10-78 HV trailer	1	-	-	-
8	31-040-01	Gravel bin with cylinder for 10-78 HV trailer	-	1	-	-
9	31-050-01	Gravel bin for 12-86 HV trailer	-	-	1	-
10	31-060-01	Gravel bin with cylinder for 12-86 HV trailer	-	-	-	1
11	31-000-02	Rear hinge 12-86 HV	-	-	1	1
12	31-000-03	Rear hinge 10-78 HV	1	1	-	-
13	49-001-03	Removable cylinder mounting plate	-	1	-	1
14	59-035-08	Pin	2	2	2	2
15	59-064-03	Handle	1	1	1	1
16	59-064-06	Rear panel 30"	1	1	-	-
17	59-068-04	Rear panel 36"	-	-	1	1
18	59-000-38	Cylinder mount ear assembly	-	1	-	1
19	300030	Bolt 1/2"-13 x 2" long	-	3	-	3
20	301550	Nylon nut 3/8"-16	1	1	1	1
21	301510	Nylon nut 1/2"-13	-	3	-	3
22	103500	Hydraulic fitting 9315 Male ORB - Female NPT Swivel Plug	-	1	-	1
23	109010	Quick Coupling Male x Female 1/2"-NPT	-	1	-	1
24	121110	Telescopic cylinder 90" stroke	-	1	-	-
25	121120	Telescopic cylinder, 108" stroke	-	-	-	1

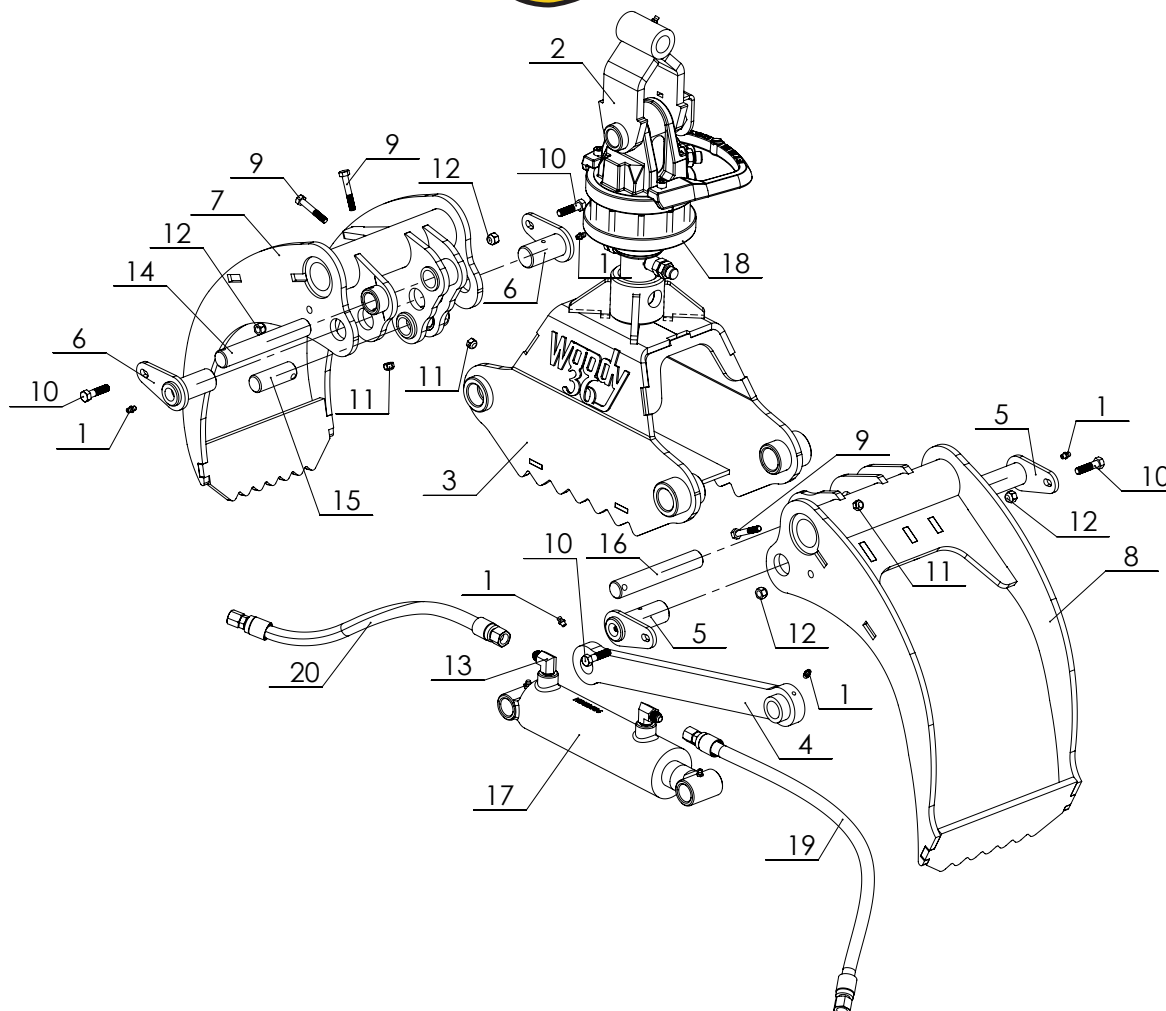

Part list - Grapple 36" (New model)


No.	Part #	Description	Qty
1	310020	Grease nipple right 1/4"-28	6
2	57-022-06	Grappler link 36" (Welding assembly)	1
3	57-022-01	Frame pince 36" Hardox	1
4	57-020-03	Retraction arm 36" Hardox	1
5	57-020-04	Assembly pine pivot for clamp	2
6	57-020-05	Assembly pine pivot for clamp	2
7	57-020-14	Interior clamp 36" Hardox	1
8	57-020-15	Exterior clamp 36" Hardox	1
9	300730	Bolt 5/16"-18 x 2" Lenght	3
10	300520	Bolt 3/8"-16 x 1 1/2" Lenght	4
11	301560	Nylon nut 5/16"-18	3
12	301550	Nylon nut 3/8"-16	4
13	100900	Serie 5405 - Elbow 90° - Male JIC 37° - Male NPT - 9/16" x 3/8"	2
14	57-022-017	Pivot shaft	1
15	57-022-026	Pivot shaft	1
16	57-020-027	Pivot shaft	1
17	120270	Hydraulic cylinder 2 1/2" Dia. x 6" Stroke	1
18	199309	Rotor CR-300	1
19	140030-022-102200-101820	Assembly hoses 3/8" - 22" Lenght	1
20	140030-018-101820-102200	Assembly hoses 3/8" - 18" Lenght	1

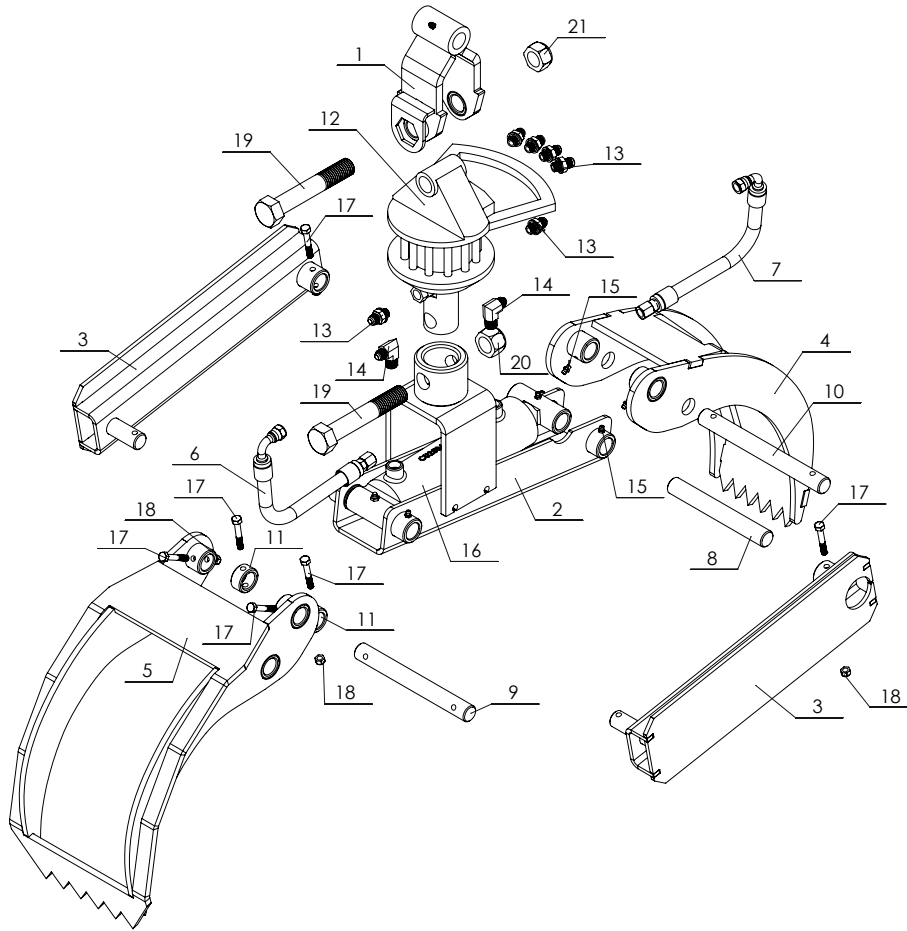

Part list - Grapple 36" (Old model)

No.	Part #	Description	Qty
1	57-000-04	Support Clamp	1
2	57-002-01	Forceps center	1
3	57-002-07	36" Grapple Center Side Plate	2
4	57-002-02	Smallest jaw	1
5	57-002-03	Biggest jaw	1
6	140030-008.5-100700-101820	Assemblay Hydraulic hose 3/8"	1
7	140030-009.25-100700-101820	Assemblay Hydraulic hose 3/8"	1
8	86-16-120	Pin, 1" O.D x 9 5/16 lg.	1
9	86-16-140-E14-00-E126-00	Pin, 1" O.D x 9 5/16 lg.	1
10	86-16-154-E14-00-E138-00	Pin, 1" O.D x 9 5/16 lg.	1
11	96-24-16-12-E06-00	Socket 1 1/2" O.D. x .242" (1.016" I.D.)	2
12	199309	Orbital hydraulic motor GR30	1
13	103000	Fitting Male BSP-Male BSP - 3/8" X 1/4"	6
14	100900	Elbow 90° - Male JIC 37° - Male NPT - 9/16" x 3/8"	2
15	310020	Greasing 1/4"-28	8
16	120272	Hydraulic Cylinder 2 1/2" Dia. x 6" Stroke	1
17	300730	Bolt 5/16"-18 x 2" Lenght x 7/8" Thread	6
18	301560	Lock Nut 5/16"-18	6
19	300320	Bolt 1"-8 x 6" Lenght x 2 1/4" Thread	2
20	301500	Lock Nut 1"-8	1
21	301610	Lock Nut 24mm - 3mm	1

Hydraulic Winch 6000 lbs Assembly 58-007

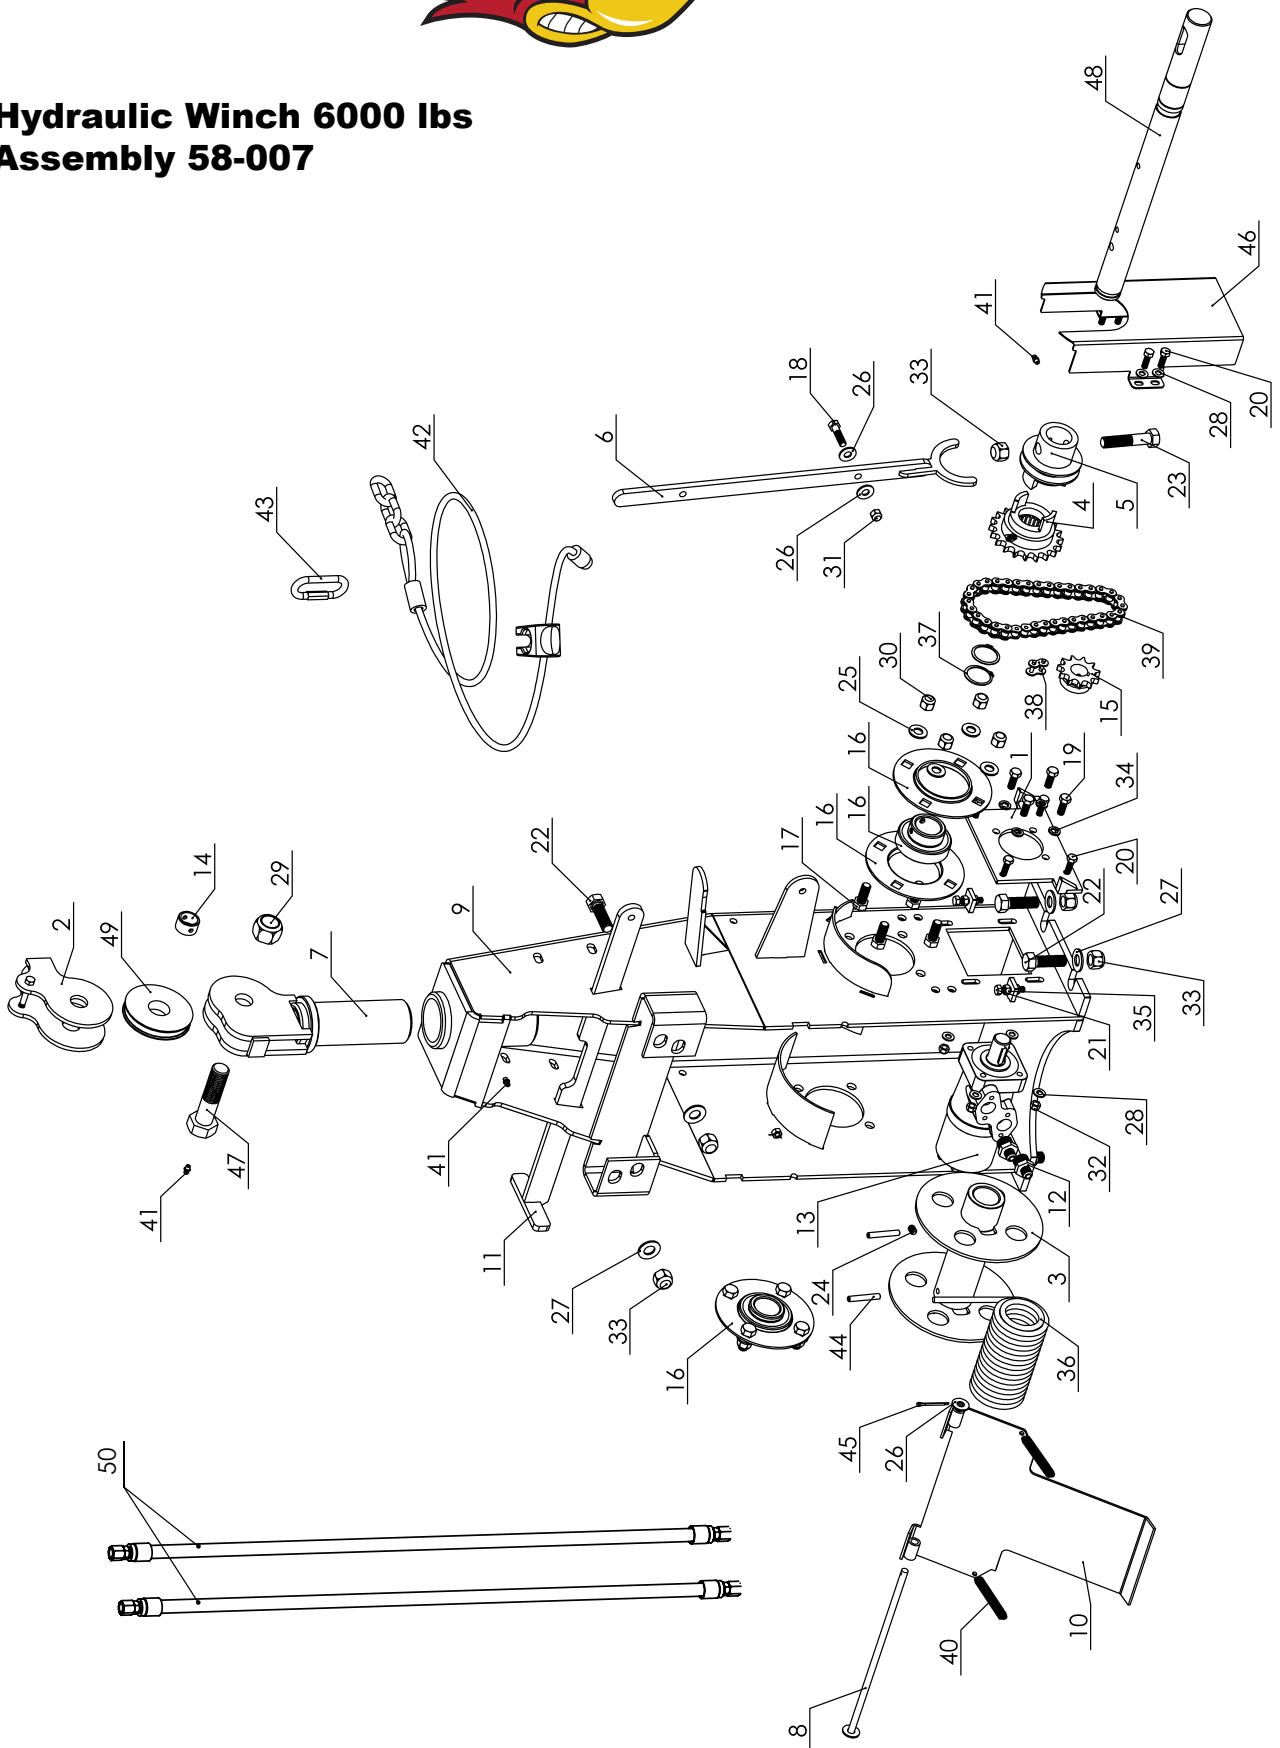




Hydraulic Winch 6000 lbs Part list Assembly 58-007

No.	Part #	Description	Qty.
1	58-000-01	Motor assembly support	1
2	58-000-04	Swivel wire guide	1
3	58-000-05	Wire drum	1
4	58-000-06	Jaw and sprocket assembly	1
5	58-000-07	Jaw clutch	1
6	58-000-08	Fork clutch	1
7	58-007-02	Swivel wire guide	1
8	58-007-03	Wire pin tensioner	1
9	58-007-04	Winch casing	1
10	58-007-05	Wire tensioner	1
11	58-013-08	Winch release handle	1
12	102710	Hydraulic fitting 3/8" - JIC Male x 7/8" - ORB Male	2
13	108070	Hydraulic motor 315cc	1
14	111000	Bushing 1 x .75	1
15	150010	Sprocket	1
16	150151	Bearing flange UCPF 208-24 WOODBPFUC150 (duo) WINCH	2
17	300020	Bolt 1/2"-13 x 1 1/4" long	8
18	300520	Bolt 3/8"-16 x 1 1/2" long	1
19	300560	Bolt 3/8"-16 x 3/4" long	4
20	300700	Bolt 5/16"-18 x 1" long	8
21	300710	Bolt 5/16"-18 x 1 1/2" long	2
22	300820	Bolt 5/8"-11 x 2" long	6
23	300840	Bolt 5/8"-11 x 3" long	1
24	301220	Socket head cap screw 3/8" dia. x 1/2" long	1
25	301310	Flat washer 1/2"	8
26	301350	Flat washer 3/8"	3
27	301360	Flat washer 5/8"	6
28	301390	Flat washer 5/16"	8
29	301500	Nylon nut 1"-8	1
30	301510	Nylon nut 1/2"-13	8
31	301550	Nylon nut 3/8"-16	1
32	301560	Nylon nut 5/16"-18	4
33	301570	Nylon nut 5/8"-11	7
34	301730	Lock nut 3/8"	4
35	301850	Hex nut 5/16"-18	4
36	304010	Cable 5/16" x 110' long	1
37	307036	Snap-Ring 1 1/2"	2
38	308910	Chain link #50	1
39	309080	Chain assembly #50 - 36	1
40	309200	Extension spring	2
41	310020	Grease fitting 1/4"-28	3
42	310720	Log choker	1
43	310725	Quick link	1
44	310880	Spring pin 5/16" O.D. x 2"	2
45	310881	Cotter pin 1/8 x 1- 1/4	1
46	58-007-018	Winch guard	1
47	58-000-006	Bolt	1
48	58-000-020	Shaft 36"	1
49	58-000-024	Cable pulley	1
50	140030-055-101820-101820	Assembly hose hydraulique 3/8" - 55" Lenght	2



6000 lbs Hydraulic Winch Parts List

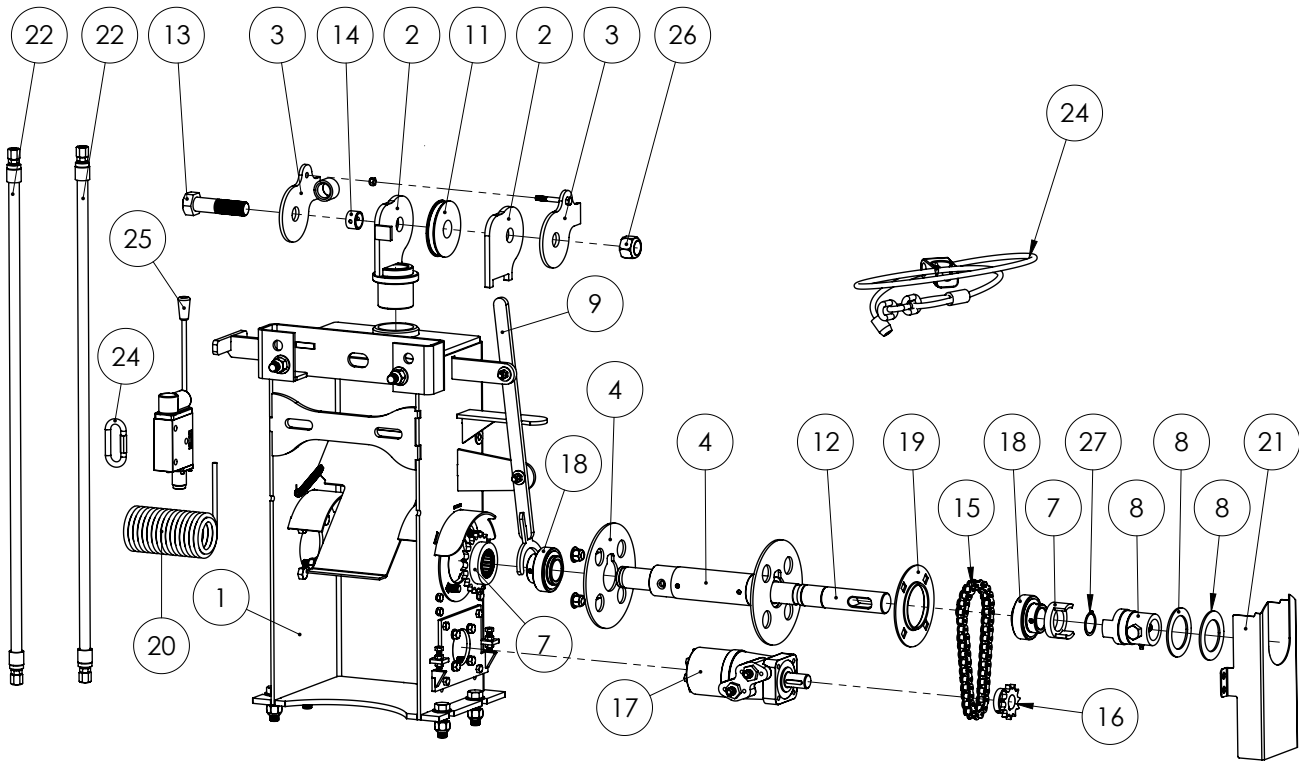


6000 lbs Hydraulique Winch - Parts List

Item	Part #	Description	Qty
1	58-013-01	26" Winch housing	1
2	58-013-04	Winch head	1
3	58-000-04	Swivel head fixation - Large, Medium, Small	1
4	58-000-05	Winch roller - Large, Medium	1
5	58-007-03	Cable tensioner pin	1
6	58-007-05	Winch tensioner - Large, Medium	1
7	58-000-06	Winch fixed clutch - Large, Medium, Small	1
8	58-000-07	Winch mobile clutch - Large, Medium, Small	1
9	58-000-08	Clutch arm - Large, Medium	1
10	58-000-01	Winch motor support - Large, Medium	1
11	58-000-024	Modified pulley	1
12	58-000-020	36" Winch roller axis	1
13	58-000-006	Modified bolt	1
14	Bush plast 1 1/4 ext x 1 int	Plastic tubing 1 1/4" O.D.	1
15	1RIV 50	Chain series #50 - 36 rollers	1
16	150010	Gear wheel #50-11 teeth heavy-duty	1
17	108070	Hydraulic motor 315 cc	1
18	150040	Bearing insert	2
19	150151	Flange bearing	2
20	304010	Nylon cable 5/16" x 110' long	2
21	58-005-011	Boom winch protector (Part)	1
22	140030-055-101820-101820	Hydraulic Hose 3/8	2
23	310720	Logging choker	1
24	310725	Quick link	1
25	130110	Galletek 1 section distributor	1
26	301500	Nylon nut 1"-8	1
27	307036	Snap ring 1 1/2"	2




Dipper Dredger 24" for Grapple 36"

Piece No. 57-025

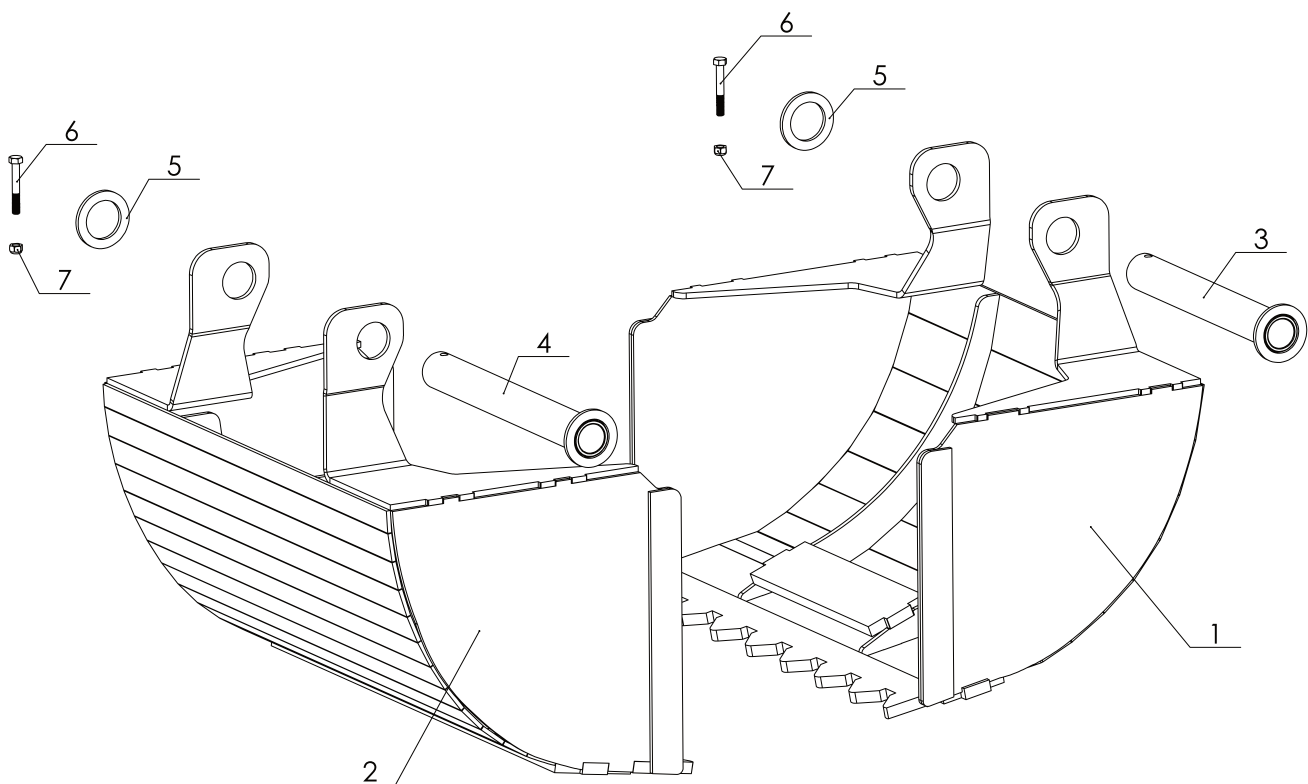


PART LIST - ASSEMBLY DIPPER DREDGER 24"FOR GRAPPLE 36", PIECE NO. 57-025

ITEM	PART NO.	DESCRIPTION	QTY
1	57-025-01	Dipper Dredger 24" for Grapple 36" Narrow claw	1
2	57-025-02	Dipper Dredger 24" for Grapple 36" Wide claw	1
3	57-025-03	Small claw pin	1
4	57-025-04	Large claw pin	1
5	57-025-022	Washer	2
6	301560	Nylon nut 5/16"-18	2
7	300730	Bolt 5/16"-18 x 2" long	2

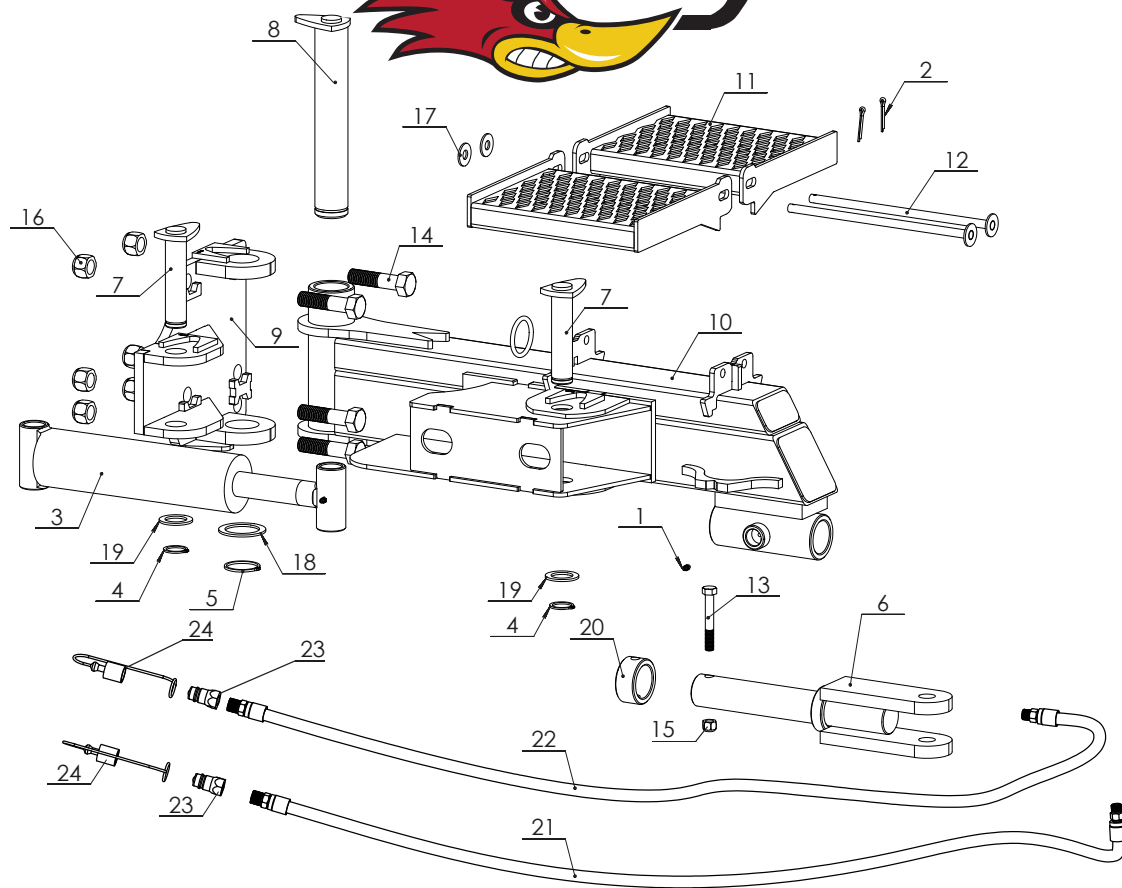

Part list
Small drawbar single joint cylinder removable
Assembly 59-076-14


Item	Part #	Description	Qty
1	310020	Grease nipple right 1/4"-28	2
2	310881	Split pin	2
3	120443	Hydraulic cylinder 3" Dia. x 8" Stroke	1
4	307063	Snap-Ring 1 1/4" Thick	2
5	307075	Snap-Ring 2" Heavy	1
6	59-020-05	Agricultural trailer coupling	1
7	59-076-04	Cylinder pin	2
8	59-076-08	Pivot cylinder	1
9	59-076-15	Simple pivoting cylinder drive	1
10	59-076-27	Guide frame small single cylinder	1
11	59-076-36	Stair tread metal sheet 9.5	2
12	59-076-74	Foot Step Pivot Assembly	2
13	300060	Bolt 1/2"-13 x 3 1/2" Length	1
14	301020	Bolt 7/8"-9 x 3 1/2" Length	6
15	301510	Nylon nut 1/2"-13	1
16	301590	Nylon nut 7/8"-9	6
17	301310	Flat Washer 1/2" Broad	2
18	59-076-034	Washer	1
19	59-076-035	Washer	2
20	59-076-105	Pole Bar Lock (shaft 1 15/16")	1
21	140030-096-101740-101750	Assembly Hose 3/8" - 8' Length	1
22	140030-096-101740-101750	Assembly Hose 3/8" - 8' Length	1
23	109010	Quick coupling Male x Female 1/2"-NPT	2
24	140000	Dust cap 1/2" red	2

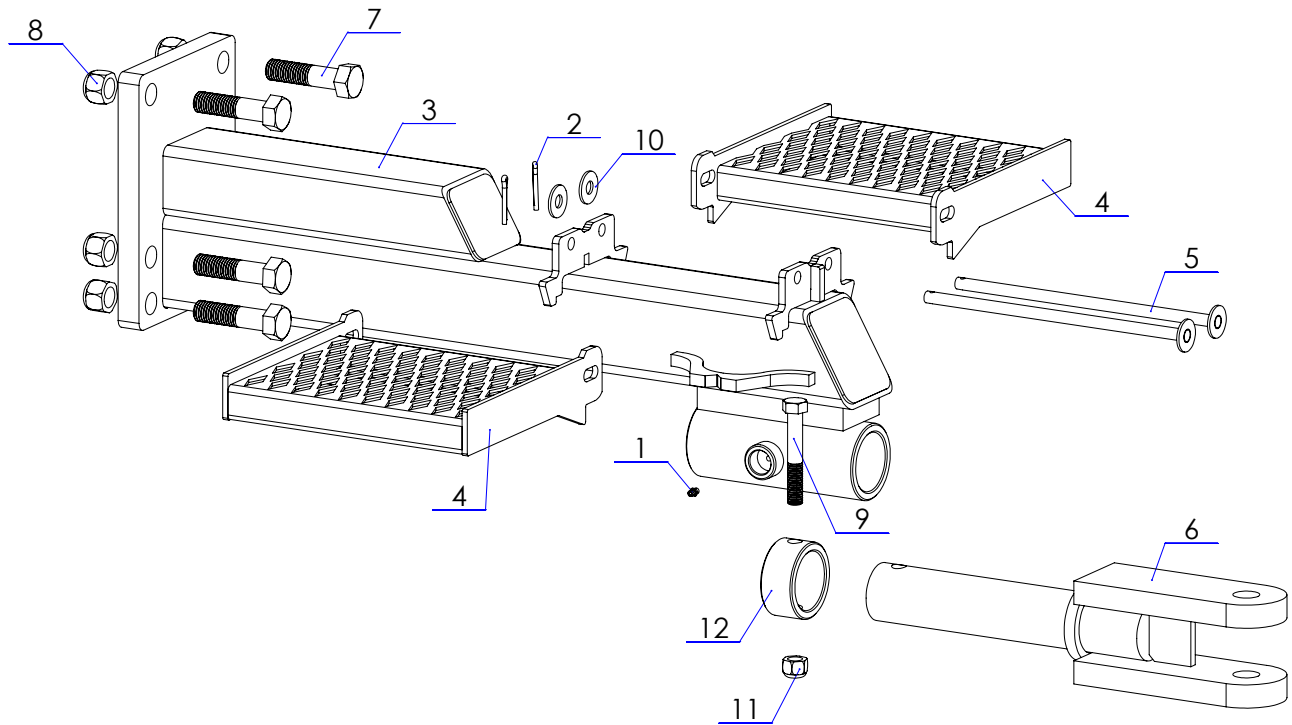

Parts List Medium pole removable - Assembly 59-076-01

No.	Part #	Description	Qty
1	310020	Grease nipple right 1/4"-28	2
2	310881	Split pin 1/8 x 1- 1/4	2
3	59-076-30	Assembly medium pole	1
4	59-076-36	Stair tread metal sheet 9.5	2
5	59-076-74	Foot Step Pivot Assembly	1
6	59-003-08	Agricultural trailer coupling	1
7	301020	Bolt 7/8"-9 x 3 1/2" Lenght	2
8	301590	Nylon nut 7/8"-9	1
9	300860	Bolt 5/8"-11 x 4" Lenght	1
10	301310	Flat Washer 1/2" Broad	1
11	301570	Nylon nut 5/8"-11	2
12	59-114-123	Hub 3 1/4" O.D. x .375" (2.500" I.D.)	2

Caractéristique Unité GX 160 Hydraulique

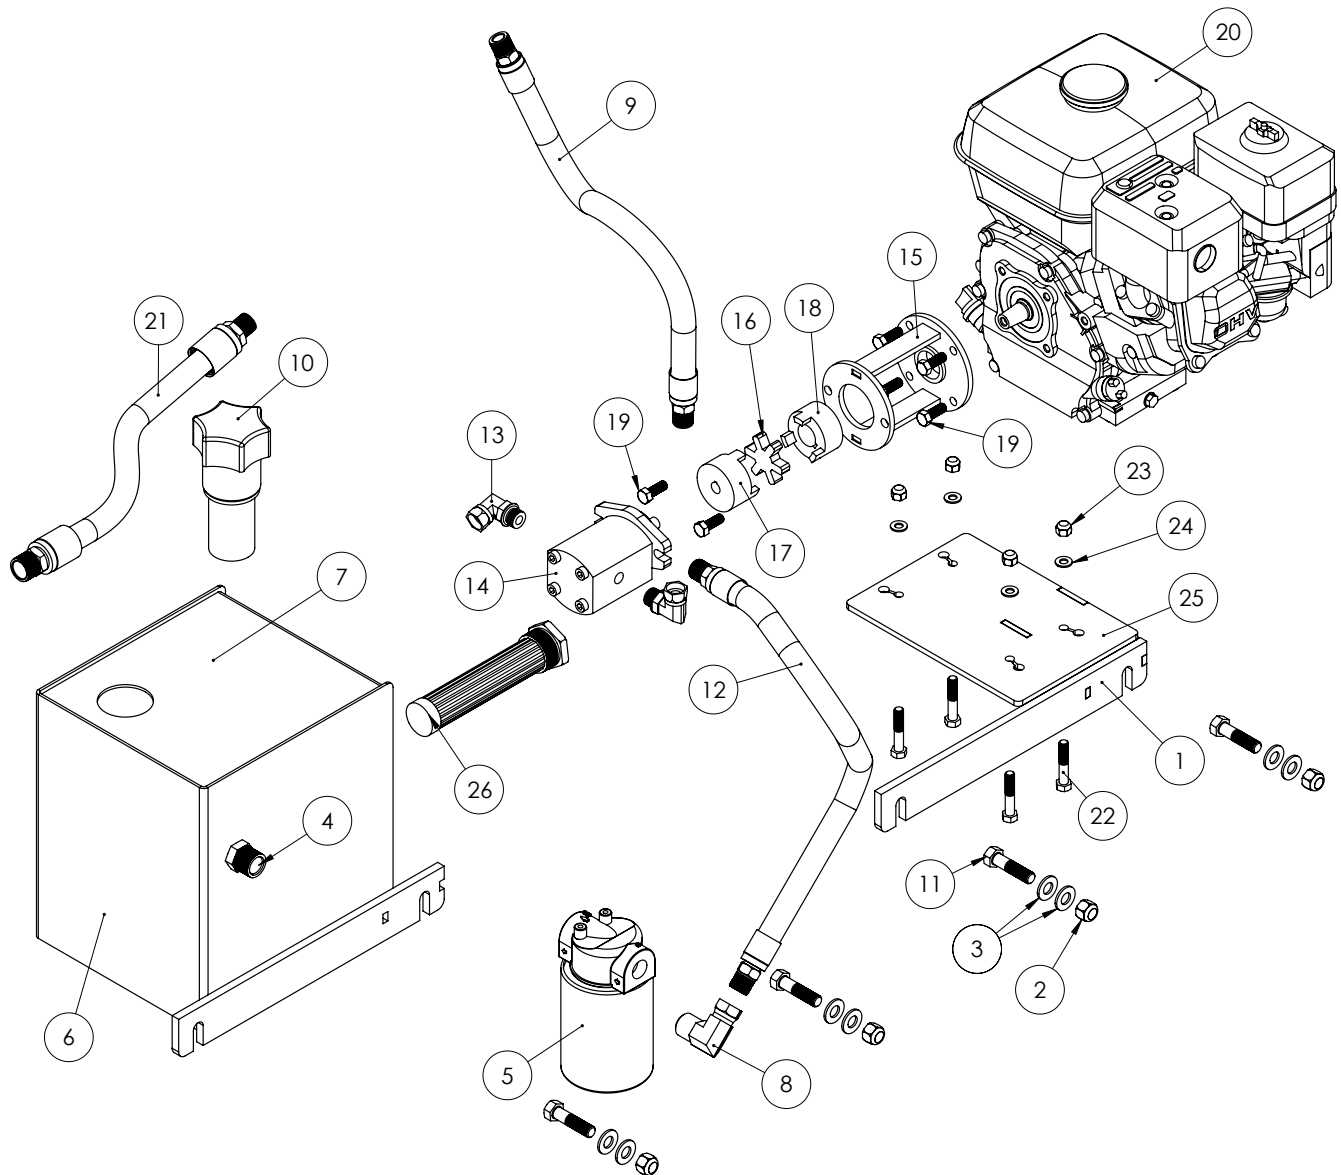




Hydraulic power unit GX 160 5.5 HP 3.2 GPM Part list

Item	Part #	Description	Qty
1	53-001-01	Engine Support	1
2	301510	Lock nut 1/2"-13	4
3	301310	Flat washer 1/2" narrow	8
4	3109-12-08	Adapter Male 3/4"-14 female 1/2"-14	1
5	190060	Filter Oil Head CP-750-10P	1
6	53-001-030	Oil container	1
7	53-001-029	Oil container lateral	1
8	101310	Elbow 90° NPSM Fem SWI x NPT Male - 1/2" x 3-4"	1
9	140040-020-101700-101700	Hose 1/2 x 20" Long-NPT male 1/2, NPT male 1/2	1
10	190000	Plug HYC-80-40-AS-WH1	1
11	300030	Bolt 1/2"-13 x 2" Lenght	4
12	140040-030-101700-101700	Hose 1/2 x 30" Long-NPT male 1/2, NPT male 1/2	1
13	101420	Elbow 90° Male ORB Adjustable 1/2" - Female NPSM Swivel 3/8"	2
14	108210	Pump Galtech SPA 3.2	1
15	106000	Belt housing	1
16	140360	Lovejoy insert 1/2 L095	1
17	140320	Love Joy Jaw Coupling 1/2" L095	1
18	140300	Love Joy Jaw Coupling 1" L095	1
19	B-06-16-16-16	Bolt 3/8"-24 UNF X 1" Lenght X 1" thread	6
20	108010	Engine Honda GX 160	1
21	140080-012-101731-101730	Hose 3/4 x 12 1/2" Long-NPT male 1/2, NPT male 3/4	1
22	300530	Bolt 3/8"-16 x 2" Lenght	4
23	301550	Nylon nut 3/8"-16	4
24	301390	5/16" Narrow Flat Washer	4
25	53-003-03	Engine Support	1
26	190020	Filter Suction LTM -10-100	1


Hydraulic hoses

Part no. 60-021

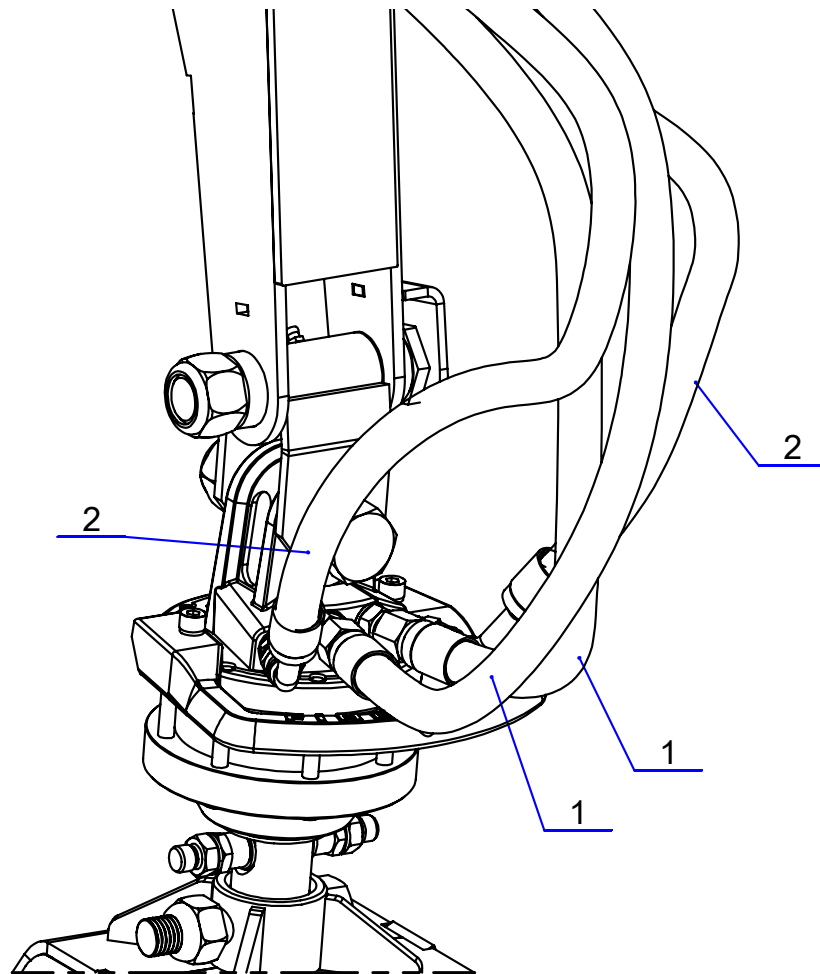

PARTS LIST - HYDRAULIC HOSES

ITEM	PART NO.	DESCRIPTION	QTY
1	140030-020-102200-102300	Assembly hose 3/8 x 20" - M20813-06-06 - M10510-06-06 for clame and rotor	2
2	140030-020-100300-102300	Assembly hose 3/8 x 20" - M20843-06-06 - M10510-06-06 for clame and rotor	2

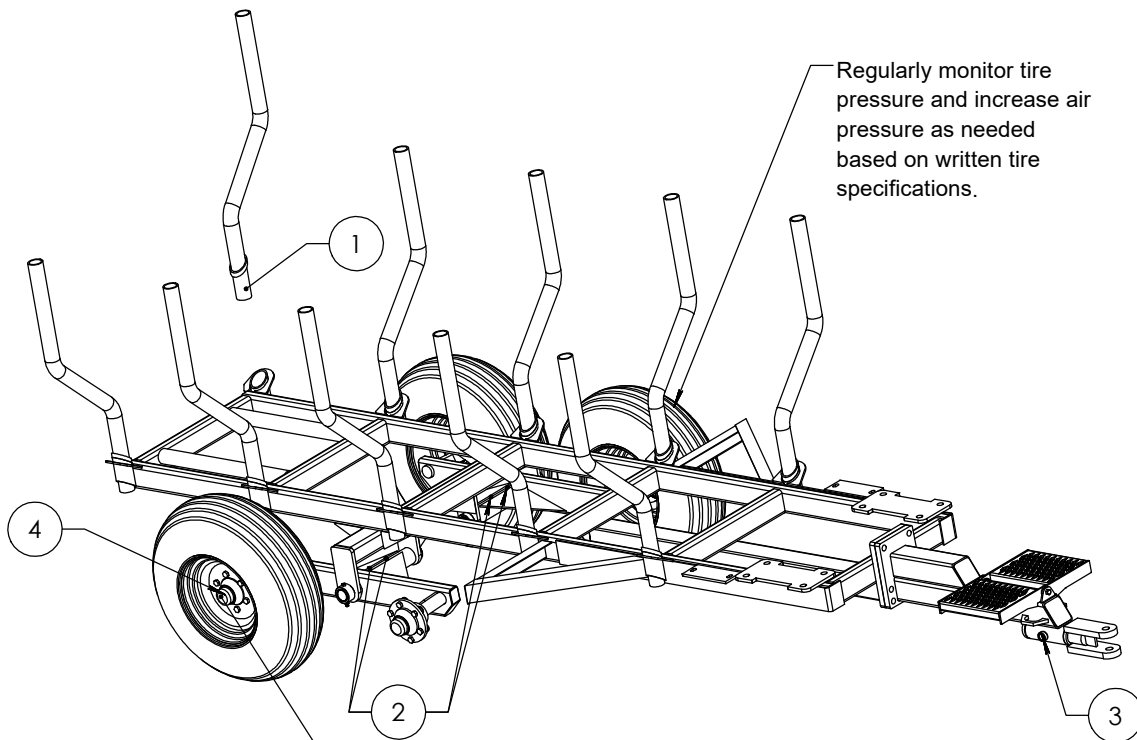


By prevention, remove the cap once a year, tighten the castellated nut, fill the cap with grease and replace the cap!

Item	Greasing point	Lubricating oil	Greasing Interval hourly / yearly
1	Posts	Bushing grease	Once a year, generously
2	Tandem pin	Bushing grease	10 hours
3	Hitch pin	Bushing grease	10 hours
4	Hub/bearing	Bearing grease	50 hours




Maintenance and safety instructions for proper use of the 6000 lbs hydraulic winch

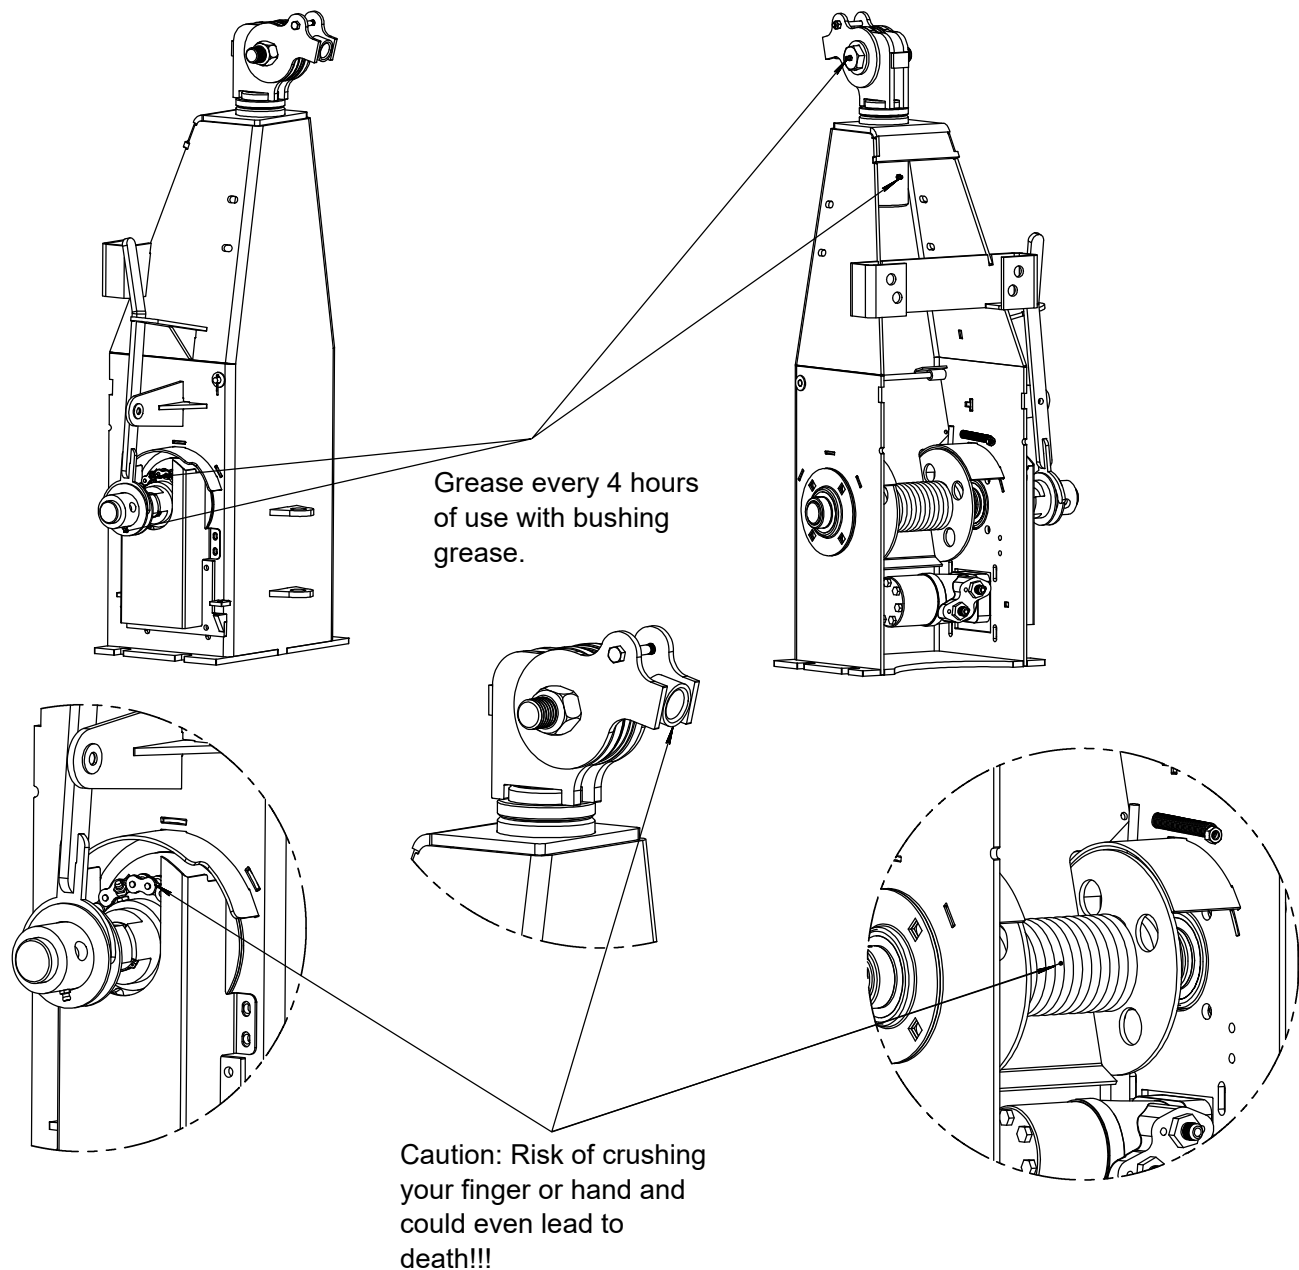




Maintenance and safety instructions for proper use of a single drawbar (Image for illustrative purposes only)

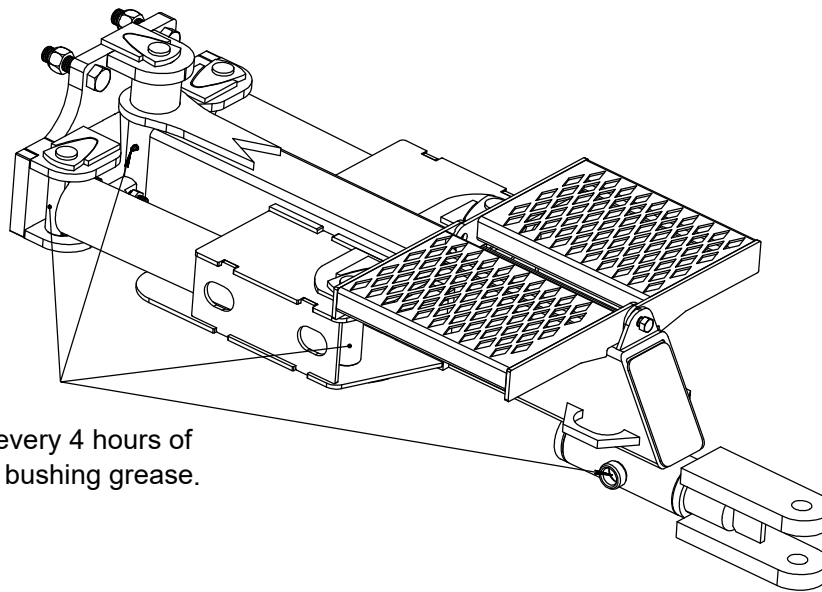

Grease every 4 hours of
use with bushing grease.

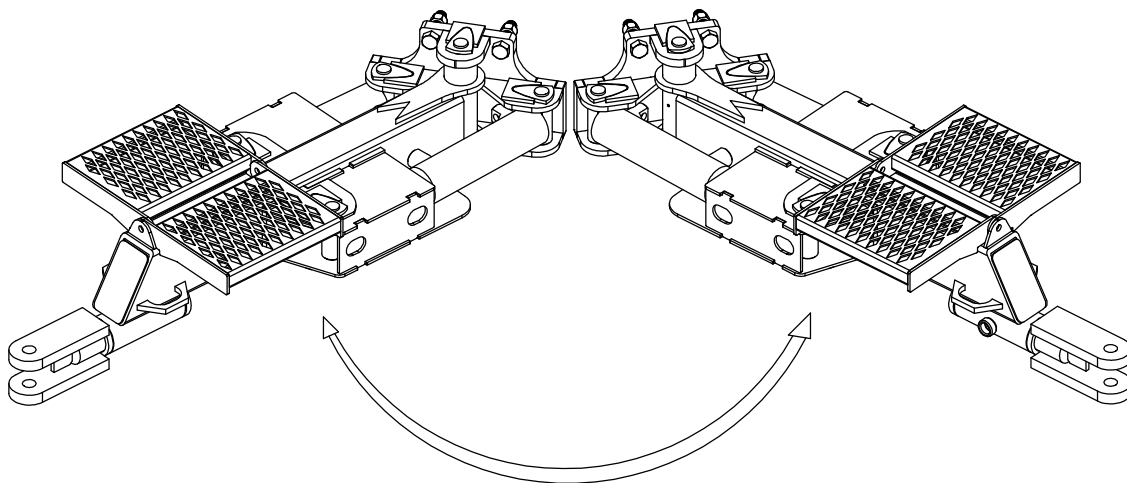

Make sure that no one is standing in
the perimeter and also make sure no
one is standing on the step!



Operation

General safety rules:

Read this instruction manual carefully before starting the loader. The technical data in this manual contains important information. Improper use can result in injury and damage to the machine .

Using a loader requires increased knowledge and experience. You must learn and know the behavior of the loader and practice using it. Study and practice the movement patterns with small loads until you master the machine completely. Stop all operations immediately if any bystanders enter the work zone (20 m).

Woody loaders are intended for normal use in the agricultural and forestry sectors. They must be used only by persons trained in the handling of this type of machinery.

. Before connecting the loader to the tractor's hydraulic system, you must read the tractor's instruction manual to ensure proper connections.

. Be extremely careful when connecting the loader to the tractor or the trailer to the tractor, as well as when detaching it.

. When operating, make sure everyone remains in the safety zone, outside of the loader risk area. The operator must have full visibility of the work zone.

. When operating, do not insert your hand or any other part of your body into the machine or under the load. Do not risk getting stuck between the different parts of the log loader or between the tractor and the trailer.

. Do not forget to raise the stabilizers before moving the equipment.

. When loading, always engage the tractor handbrake.

. Never leave the boom in a raised position without having control of the loader.

. Never use the loader to pull, push or hit.

. Be particularly careful when loading and unloading heavy materials.

. Never use the loading device during transport.

. To stop the machine, lower the loader boom and grapple on a firm surface, turn off the engine, engage the handbrake and remove the key from the ignition to prevent unauthorized use.

. The loader is not intended for lifting people.

. Be very careful when loading or unloading near high voltage lines. Keep a safe distance from live cables.



Safety Instructions

If the overload protection of the hydraulic system is not properly adjusted or certain system functions are altered, safety cannot be ensured.

- . Always lower the hydraulic stabilizers before each operation to avoid overturning.
- . Always check that any unauthorized personnel remains outside the work risk area.
- . Never stand under a suspended load.
- . Make sure that the tractor and trailer are always on firm ground so that there is no risk of overturning. When loading, use the stabilizers to prevent tilting of the loader.
- . Make sure you always have a visual view of the work area.
- . Do not work in conditions where you may get your fingers caught or hurt yourself.

When there is a risk of overturning, immediately lower the stick boom with the control lever.

- . Hold the lever in this position until the load is on the ground. Do not interrupt the lowering movement as the risk of overturning will increase if the load stops abruptly.
- . If the tractor rolls over, follow the instructions in the cab. Do not jump out of the cab. You could end up under the load during a fall or under the tractor.

Note: Even if the stabilizers have been lowered to the ground, the risk of overturning is greater when the trailer is empty or partially loaded.

Cracks in hydraulic hoses

- . In the event of pressure loss in the hydraulic fluid or cracks in the hydraulic hoses, you must immediately shut down the tractor engine and lower the load to the ground. Stop the hydraulic flow. Repair the leak.
- . If the main pressure hose between the tractor and the control system is cracked, you must interrupt the oil flow by disconnecting the lever control associated with the tractor's hydraulic distributor or by shutting off the engine with the OFF button.



Safety Instructions

Driving on the Road

Observe the following instructions to avoid any risk of accident.

Position During Transport

- . If there is no load, position the loader boom as low as possible on the trailer. Make sure that the grapple and the rotator are firmly attached to the trailer, so that there is no risk of the loader rolling over during transport
- . Make sure that none of the additional equipment connected to the loader is likely to cause an accident during transport.

Control is Important

- . You must constantly be in control of the machine at all times and in all situations.
- . Check that the "slow vehicle" plate and the reflective signals are correctly positioned. Check if the trailer lights are functioning correctly and check the tire pressure.
- . The total permitted weights (in particular the weight of the axle) and the transport dimensions must never be exceeded.
- . You must adapt your speed to the driving situation. Drive with caution when one side is tilted, as well as on sloping ground. There is a risk of over turning.
- . Respect the laws of the road and applicable regulations.
- . The braking distance of a tractor equipped with a trailer is longer than for other vehicles, beware of the risk of skidding and check for irregularities in the road.
- . Secure the load and other loose parts securely.

Oil and Grease Caution

- . Avoid any oil or grease contact with the skin during maintenance. Wear appropriate protective clothing
- . Never wash your hands with lubricating oil or grease. It may damage your skin. If your skin is irritated after contact with oil or grease, contact a doctor immediately.
- . When servicing, waste oil should be disposed of in accordance with local regulations.



Safety Instructions

Welding Repair

. If a repair or modification requires the welding of certain parts, you must first contact your dealer for necessary instructions. Improper welding or negligence during welding can cause sudden machine breakdowns.

Working in Extreme Conditions

. The recommended ambient temperature for the operation of this machine is between -20°C and $+30^{\circ}\text{C}$. Low or high temperatures result in increased wear and stress on joints and hoses. In addition, steel wears faster, and cracks can occur.

. When working in extreme conditions, reduce loads to prevent damage. In case of low temperature let

times to soften the joints and hoses before applying full pressure. When it is extremely hot, pay attention to the oil temperature. A temperature above 80°C alters the properties of the oil and damages joints and hoses.

the hydraulic oil circulate freely during several minutes. Then operate each function several times.
Maintenance and Servicing Safety Instructions

. Regular maintenance and service ensure optimal and cost effective operation.

. Note: Failure to follow the instructions in this manual will void all warranties related to this machine. Regular and proper maintenance are a prerequisite for warranty coverage.

. Read the instructions before servicing the machine. Each maintenance task requires reading and following instructions. Maintenance and lubrication should be done at the recommended intervals.

. Always use tools suitable for the maintenance / servicing tasks involved. Wear protective clothing and glasses.

. Shut off the tractor engine and remove the ignition key. If the engine has to run during certain maintenance operations, please stay away from any moving parts of the machine.

. Be extremely careful with pressurized oil. Oil under high pressure easily penetrates the skin. In case of accident, consult a doctor immediately.



Safety Instructions

Maintenance and Servicing Safety Instructions

- . Hot oil can cause burns. Inhalation of hot oil vapor can cause breathing difficulties.
- . If a hose bursts and you get oil on your skin, it is not dangerous. However, avoid oil contact with eyes and nose. If you get oil in your eyes or in your respiratory tract, contact a doctor immediately.
- . Keep explosive and flammable liquids away from sparks and open flames.

Daily inspections


It is important to inspect the equipment daily. If you notice a defect, you must repair it immediately.

- . When under load pressure, worn bolts can provoke a risk of rupture. If cracks are detected on the loader, any operation in progress must be stopped immediately.
- . Damaged hoses must be replaced immediately. Check for leaks. Oil leaks create a risk of accidents and can harm the environment.
- . Check the bolts and tighten the bolts if necessary.
- . Perform the various movement patterns of the loader to verify that all functions are intact and working properly.



Safety Instructions

Greasing points and intervals

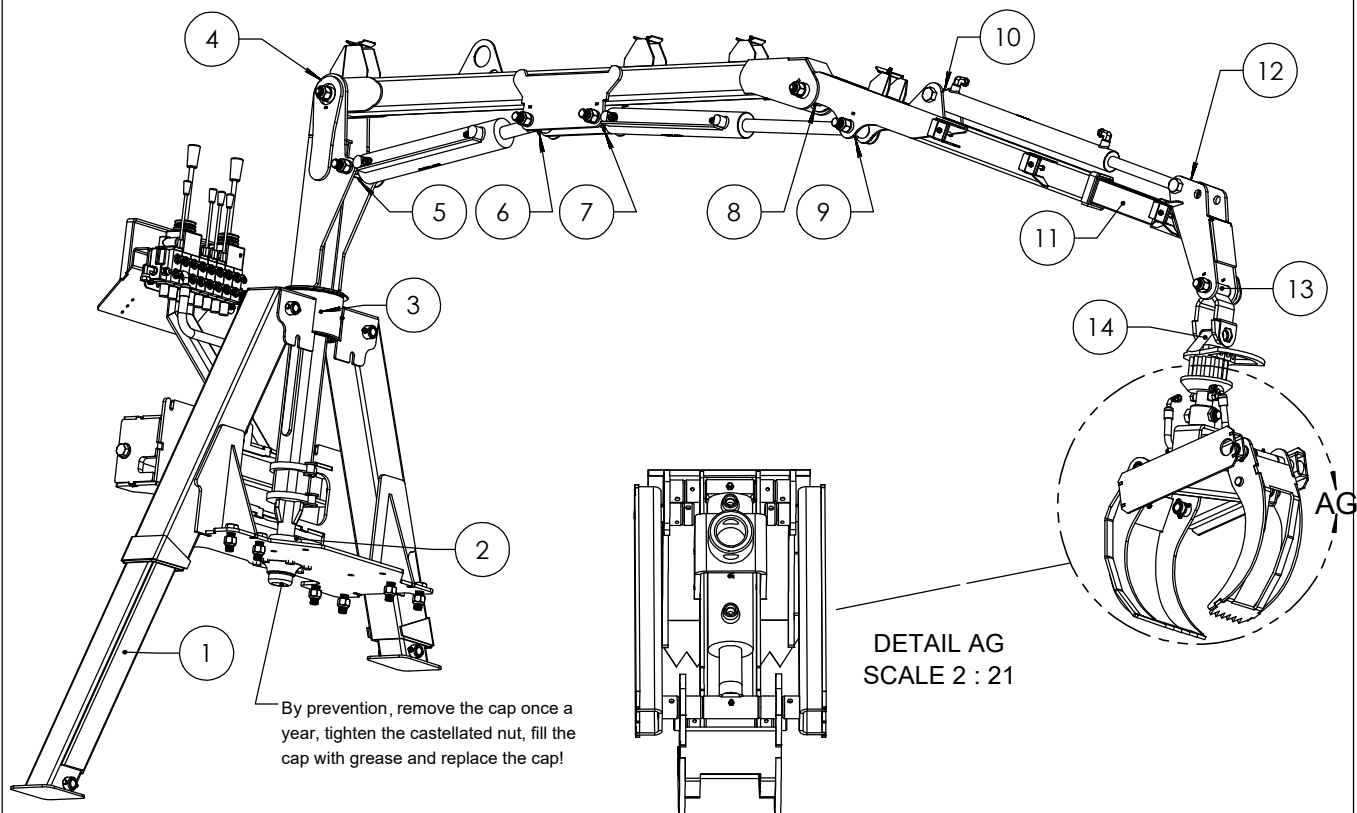

ITEM	Greasing point	Lubricating oil	Greasing Interval hourly / yearly
1	Telescopic stabilizers	Bushing grease	Once a year, generously
2	Hub/bearing	Bearing grease	Every 10 hours
3	Rotation	Bushing grease	Every 10 hours
4	Main boom pin	Bushing grease	Every 10 hours
5	Cylinder pin	Bushing grease	Every 10 hours
6	Cylinder pin	Bushing grease	Every 10 hours
7	Cylinder pin	Bushing grease	Every 10 hours
8	Stick boom pin	Bushing grease	Every 10 hours
9	Cylinder pin	Bushing grease	Every 10 hours
10	Cylinder pin	Bushing grease	Once a year
11	Telescopic boom	Bushing grease	Once a year, generously
12	Cylinder pin	Bushing grease	Once a year
13	Grapple yoke pin	Bushing grease	Every 10 hours
14	Rotator pin	Bushing grease	Every 10 hours
15	Grapple greasing points	Bushing grease	Every 5 hours



Safety Instructions

Storage

If you plan to stop using the loader for a long period of time, it should be cleaned carefully. Note that high pressure cleaning is not recommended! After cleaning, make a visual inspection for any cracks (if you find any, you must have them repaired before the next use of the loader) all grease nipples must be lubricated. The grease is used to evacuate water and thus neutralize corrosion and wear.

- . Store the loader under a roof. If this is not possible, cover it with a tarpaulin.
- . Place loader boom and grapple in the transport position.

Note: A stored loader is not a play area for children.



1 YEAR LIMITED WARRANTY

Les Équipements Woody Inc.

Warranty Qualifications

Les Équipements Woody Inc. (hereinafter referred to as "Woody") warrants its Log Loader (hereinafter referred to as the "Product") against defects in material or factory workmanship, subject to all the terms and conditions stated herein.

All Products manufactured by Woody and used for domestic purposes (excluding commercial and industrial use) are covered by a one (1) year warranty applicable from the purchase date, except in particular cases when the warranty might be modified according to adjustments specified on the sales contract.

The warranty extends only to the original purchaser (hereinafter referred to as the "Buyer") of the Product and not to other purchasers or transferees unless agreed to in writing by Woody that the mechanical and electrical components will be free of defects in material and workmanship for the warranty period. The warranty covers all the parts of the new Product, except the hydraulic hoses, the hydraulic fittings and the electrical wires, and includes the labor performed by Woody or by a Woody authorized Dealer (hereinafter referred to as the "Dealer").

Warranty Repair and Replacement Service

All warranted repairs must be performed by Woody or by an authorized Dealer with the written consent of Woody, otherwise the warranty will be voided. Woody reserves the right to either repair or replace, without cost to the buyer any part judged defective on grounds of defective materials or workmanship. It also reserves the right to determine if the defect resulted from lack of maintenance or incorrect or abusive use of the Product.

In the event of any failure caused by a defect in material or in factory workmanship covered by this warranty, the Buyer shall: (1) notify Woody of the nature of the problem without delay; (2) stop using or operating the Product, unless authorized in writing by Woody.

Warranty service shall be performed at the point of purchase of the Product either by Woody or by a Dealer using parts provided by Woody.

If the Product was purchased directly from Woody, the Buyer shall return either the Product or the defective parts "prepaid" to Woody without delay. If Woody deems that the parts are in fact defective, it shall repair or replace the parts and, when the Product is returned to Woody, install them free of charge to the Buyer.

If the Product was purchased from a Dealer, Woody shall provide the replacement parts to the Buyer through the intermediary of the Dealer. The Dealer shall install the parts and return the replaced parts to Woody, "prepaid" by the Buyer, within thirty (30) days of the repairs. The parts and their installation shall be without charge to the Buyer providing that the replaced parts are proven defective to Woody's satisfaction.

In all cases, all costs related to the transportation of parts or of the Product to and from Woody or the Dealer, any premium charged for overtime labor requested by the Buyer or for any service and/or maintenance shall be the sole responsibility of the Buyer.

All parts replaced under the warranty shall remain the property of Woody.

If the Buyer fails to follow any of the above procedures or if the parts are not proven to be defective to Woody's satisfaction, the Buyer shall not benefit from the warranty.



No Dealer Warranty

The Dealer has no authority to make any representation or promise on behalf of Woody, or to modify the terms or limitations of this warranty in any way.

Warranty Exclusions

This warranty does not cover the following:

Product needs periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole or by lack of reasonable and proper maintenance, by lack of proper protection during storage, by failure to follow operating instructions and/or failure to operate the Product according to the specifications outlined by Woody.

This warranty does not apply to damage caused to the Product or machinery by the Buyer or Dealer during installation of the Product or due to improper installation of the Product.

This warranty will not apply to parts and/or labour if this Product is deemed to have been misused, neglected, involved in an accident, abused or defects caused by any alteration or modification of the Product not approved in writing by Woody.

Other Exclusions

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Any damage resulting from overturning the machine.
- Failures due to acts of God and any other major force events beyond Woody's control.
- Problems caused by parts that are not original Woody parts.
- Certain parts are guaranteed by their respective manufacturer.

Limits of Implied Warranty and Consequential Damage

Woody disclaims any obligation to cover any material or personal damages, including loss of time, loss of income use of this Product, replacement rental, freight or any other damages caused by a defective Product or any incidental or consequential claim by anyone from using this Product.

Contact information

Address

Les Équipements Woody Inc.
205 rue Commerciale
Saint-Odilon (QC)
Canada G0S 3A0

www.equipementswoody.com

Parts and Service

T. 418 464-2748
F. 418 464-2746
info@equipementswoody.com